

MAJESTIC

PORTABLE BLUETOOTH SPEAKER COSMOS



USER MANUAL



New MAJESTIC S.p.A.
Via Rossi Martini, 41
26013 Crema (CR) – Italia
www.newmajestic.com
MADE IN CHINA

Safety instructions

Read this booklet thoroughly before using and save it for future reference

CAUTION:



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK
DO NOT REMOVE COVER (OR BACK), NO USER
SERVICEABLE PARTS INSIDE REFER SERVICING TO

QUALIFIED SERVICE PERSONNEL



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature

accompanying the appliance.

READ ALL INSTRUCTIONS BEFORE USE



Always follow basic safety precautions when using this Bluetooth speaker system.

PACKING CONTENTS


- COSMOS-1pc
- User's Manual -1pc
- USB power cable -1pc
- AUX cable -1pc
- Warranty card -1pc

Guide to the Appliance

LED indicator	Purpose
Red	Charging
Off	Charging is completed

Pairing LED	Purpose
Blue (Blinking)	Power on/Searching
Blue (Stop Blinking)	Pairing successfully
Blue (Blinking)	Paired/ Music Playback

SPEAKER OPERATION SYSTEM DESCRIPTION

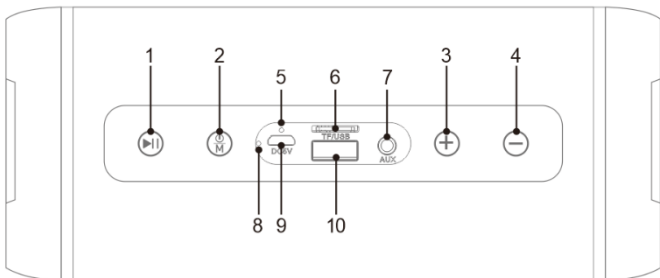

1. Play/Pause button
2. Power/Function button
3. Next song/Volume+
4. Previous song/Volume-
5. LED indicator
6. MicroSD input
7. AUX input
8. Microphone
9. Micro USB input for charging
10. USB input (not for charging)

Getting started

Charge

The speaker has a built-in rechargeable battery that can be recharged via the supplied USB cable. Before use, it is recommended to fully charge the battery. During the charging phase the red LED will be on (the speaker will charge in about 4 hours).

The indicator will switch off when the appliance is fully charged.

Note:

- Low battery warning: when the speaker is unloaded it will start to emit a warning sound periodically, recharge the unit to resume playback.
- The battery life (lasting about 8 hours with listening to an average volume) may vary depending on the listening volume, the associated external device and the use or otherwise of the TWS function.
- Charging times may vary depending on the state of charge of the product and the characteristics of the charger used.

Operating instructions

Power On/Off

1. Long press the Power ON/OFF button to turn it ON, then you can hear the short prompt voice and Pairing LED is blinking in Blue color.
2. The speaker is available for pairing your Bluetooth device now.

Note: The unit will automatically connect to your paired device previously.

3. When you long press the Power ON/OFF button again, the unit will be power off and hear short prompt voice

Note: Automatically power off 5 minutes after disconnected your Bluetooth device.

Play / Pause

During music playback, you can press the Play/Pause button to pause playback. Pressing the Play/Pause button again resumes playback.

Bluetooth Function

The Speaker supports playing music through Bluetooth connection with

applications in your smartphone or other Bluetooth device.

Note: compatibility with all Bluetooth devices on the market cannot be guaranteed.

Bluetooth connection:

1. Power on the speaker, and switch on the Bluetooth function from your device, the Pairing LED will be blinking in blue as ready for pairing.
2. Then search the named "COSMOS" and click to connect from your Bluetooth device (digit "0000" if requested only).
3. Pairing LED will stop blinking and prompt beep sound if pairing successfully.

Remark: Once the device paired with speaker successfully, it will be connected your device automatically, Bluetooth pairing is not required again.

Answer Incoming Call

1. When your smartphone is paired with speaker, the speaker rings with Ding-dong sound when an incoming received. Press ►|| button to answer the call. Press and hold the ►|| button to reject incoming call. Press the ►|| button twice to call-back the phone.
2. When under TWS mode, press ►|| button at master speaker to answer the call.

TWS (True Wireless Stereo) function

If you have two pieces of Micro Bluetooth Speakers COSMOS, then you can activate TWS (True Wireless Stereo) function.

*the connection between two speakers are approx. 3 meters in open air. *

Activating TWS function (how to pair two COSMOS speakers together):

1. Turn on the two COSMOS Bluetooth Micro Speakers.
2. The LED indicator will flash on both speakers.
3. Press the Power ON / OFF button twice on the loudspeaker you want to set as main (a confirmation tone will sound) and wait.
4. When the secondary speaker emits a sound and its pairing LED will stop

flashing it means that pairing is successful and the TWS function is active.

5. When the TWS function is active the main speaker has the blue LED flashing while the secondary speaker has the solid blue LED.
6. Activate Bluetooth on the external device, look for the name "COSMOS" and choose it to perform Bluetooth pairing.

Note:

- The TWS function, the controls and the microphone (used during calls) are managed exclusively by the main speaker.
- When both speakers are turned on if they are in the same radius, they will automatically attempt to connect to each other to activate the TWS function.

Deactivation of TWS function:

To deactivate the TWS function and remove the association between the two speakers, press the ON / OFF button twice on the loudspeaker set as main (i.e. the loudspeaker that has the pairing LED blinking).

USB/MicroSD playback

1. Insert a USB/microSD card (containing MP3 tracks) into the appropriate input and turn on the speaker. Playback will start automatically.
2. Press the "Previous song/Volume-" or "Next song/Volume+" button to skip to the previous / next song.
3. Long press the " Volume -" or " Volume +" button to adjust the volume.
4. In order to change the source (between Bluetooth/USB/microSD/AUX) short press "Power/function" button.

AUX playback

To play some audio via the AUX input, connect one end of the appropriate cable to the AUX input on the speaker and the other to the external device. Start playback directly from the external device.

Note: in the AUX mode it is not possible to go to the previous / next track with the "Previous/Volume-" and "Next/Volume+" keys, but it is necessary to execute the operation directly from the connected external device.

In order to change the source (between Bluetooth/USB/microSD/AUX) short press “Power/function” button.

Trouble Shooting

Problem	Remedy
Power light is not lit	Long Press the Power ON/ OFF button to switch On. Too low battery, charge the unit again.
Cannot pair	Check whether the speaker is powered on and in searching mode. Check whether there are too many Bluetooth receives around your Bluetooth device. Turn them off to avoid any disturbance and pair again.
Sound is weak or distorted	Check your device and adjust to a suitable. Ensure the speaker is charged.
Cannot play properly. The music is intermittent	Check whether the distance between the speaker and your Bluetooth device is out of its working distance of 10m. Remove the obstacles and the Bluetooth device. Move to get the speaker or the Bluetooth device again to get the best position.







Care Instructions

1. Keep the unit away from magnetic objects, water, and heat sources.
2. Use a clean soft damp cloth to clean the cabinet. Never use chemical cleaners that could damage the finish of the unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TECHNICAL SPECIFICATIONS:

Bluetooth version	v5.1
Effective reception distance	10m
Battery capacity	1200 mAh
Power source	DC 5V – 1000mA (Micro USB)
Max output power (RMS)	2x2W
Playback time	About 8 hours at medium volume
USB/microSD	Supported file system: FAT32 Max storage: 32GB
Supported format USB/microSD	MP3
Dimensions	19 (L) x 8 (H) x 8 (P) cm
Product weight	535g

 Modello: COSMOS Alimentazione: 5,0V $\bar{\text{---}}$ 1000mA Potenza d'uscita in RMS: 2x2W Consumo: 4W New Majestic S.p.A. Via Rossi Martini, 41 26013 Crema (CR) – Italia www.newmajestic.com  Made in China	 MADE IN CHINA  NEW MAJESTIC S.P.A. Via Rossi Martini 41 26013 CREMA(CR) Italy www.newmajestic.com
 WEEE Logo (Waste electrical and electronic equipment)	 Battery disposal

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

INFORMATION TO USERS OF DOMESTIC EQUIPMENTS



Pursuant to Art. 25, Paragraph 1 of the Legislative Act N. 49 14th March 2014, "Implement of the Directives 2011/65 / EU and 2012/19 / EU concerning the reduction of the use of hazardous substances in electrical and electronic equipment, as well as waste disposal".

The crossed bin symbol on the appliance or on its packaging indicates that the product at the end of its useful life must be collected separately from other waste. The user must, therefore, dispose the equipment at the end of its life to the appropriate electronic and electro technical waste centers, or return it to the retailer at the time of purchase of a new type of equivalent equipment, one by one.

Appropriate separate disposal for the subsequent start-up of the disused equipment for recycling, treatment and compatible environmental disposal helps to avoid possible negative effects on the environment and health and favors the re-use and / or recycling of the materials it is composed the equipment.

The illegal disposal of the product by the user involves the application of the penalties referred to in current laws.

Any rechargeable batteries or rechargeable batteries contained in the device must be disposed separately in the appropriate expired batteries bins.



Battery disposal

Disposal of expired batteries must take place at the appropriate recycling centers or according to local authority. Batteries in compliance with the 2013/56 / EC directive.