

MAJESTIC

DVX 475USB



INSTRUCTION MANUAL

DVD



USB
UNIVERSAL SERIAL BUS



New Majestic SPA via Rossi Martini 41, 26013 Crema (CR)

www.newmajestic.com



MADE IN CHINA

SAFETY INFORMATION

Dear customers

We take the opportunity to thank you for purchasing this DVD player. We strongly recommend that you study carefully the operation instructions before attempting to operate the unit and that you have noted the listed precautions.

Note

This unit can be used only where the power supply is 100V-240V~ 50/60Hz.

Caution

* DVD PLAYER IS A CLASS 1 LASER PRODUCT. HOWEVER THE PLAYER EMITS A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE DVD PLAYER CORRECTLY AS INSTRUCTED WITHOUT OPENING CABINET AND LOADER COVER.

* WHEN THE PLAYER IS POWERED ON, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY OR OTHER OPENINGS TO LOOK INTO INSIDE OF THE PLAYER.

* WHEN THE PLAYER IS POWERED ON, DO NOT REMOVE THE PROTECTIVE CAP ON THE OPTICAL SCART. RED BEAM EMITTED WILL HARM YOUR EYES ESPECIALLY TO CHILDREN WHEN YOU LOOK AT OPTICAL SCART. PUTTING ON THE PROTECTIVE CAP WHEN THE SCART IS IDLE.

* RADIOACTIVE DANGER MAY BE CAUSED IF YOU DO NOT FOLLOW THE METHOD STIPULATED HERE FOR THE OPERATION, ADJUSTMENT OR CONTROL.

* PLEASE CONSIGN THE MAINTENANCE TO PROFESSIONAL TECHNICIAN.

SAFETY WARNINGS

For safe use and maximum performance, please read this manual carefully before use.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT DISASSEMBLE THE APPLIANCE. THERE ARE NO USER SERVICEABLE PARTS. FOR REPAIRS CONTACT QUALIFIED TECHNICAL STAFF.

To avoid the danger of electric shock or fire, do not expose to rain or moisture. Read all safety instructions before use.



DANGEROUS VOLTAGE!



The symbol to the side warns the user of the presence of voltage that could not be isolated and may cause electric shock.



This symbol warns the user that before using the unit, it is necessary to carefully read the instruction booklet.

IMPORTANT NOTES

● The use must be allowed only to adults and responsible persons, adequately educated on the damages deriving from incorrect use.

● This appliance can be used by children aged 8 and over if they are under supervision or if they have received instructions regarding the safe use of the appliance and if they understand the dangers.

involved. Cleaning and maintenance operations by the user must not be carried out by children unless they are over 8 years of age and operate under supervision. Keep the appliance and its cord out of the reach of children under the age of 8.

● The devices can be used by people with reduced physical, sensory or mental abilities or with a lack of experience and knowledge if they are supervised or if they have received instructions regarding the safe use of the appliance and understand the dangers involved.

● Children must not use the appliance as a game.

● Do not allow the appliance to be used by children or the disabled without supervision

● Keep away from pets

● Never use the appliance in places where the cord, plug and the product itself may come into contact with water or wet surfaces. Do not use the appliance outdoors, as rain could create short circuits. Do not touch the appliance with wet hands.

● Avoid installing the unit in the locations listed below:

-Places exposed to direct sunlight or close to equipment that generate heat, such as radiators;

-Above other stereo equipment that may radiate excessive heat;

-Places that block ventilation or are humid or dusty;

-Environments subject to constant vibration;

● Do not place accessories with naked flames, such as lighted candles, on the appliance.

● Do not try to repair or intervene on the appliance yourself. Incorrect interventions or tampering can void the guarantee. In the event of any damaged parts or suspected malfunction, discontinue use immediately and consult qualified personnel. Never immerse the appliance in water or other liquids. Do not place vessels containing liquids (such as vases) on top of the appliance.

● Do not touch the appliance with wet hands and do not place it near sinks, tubs or containers of liquids.


Use the product only if it is in perfect condition. If the appliance has been immersed in water or is damaged, contact qualified personnel. Do not try to repair the appliance yourself. Any tampering or incorrect repairs void the warranty.

● The product should not be used if it has been dropped or if there are any visible signs of damage.

● Exposure to high volume levels can cause hearing problems, including permanent damage. The predisposition to hearing loss varies from person to person, however constant exposure to high volume levels is harmful to anyone. Moderate the volume level.


1. Brief Instruction of Controls

Front panel identification

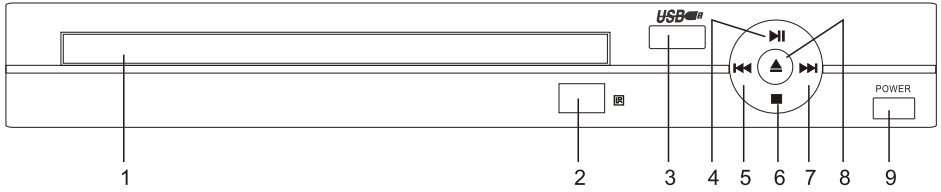


- 1. DVD Disc door
- 2. Remote control signal sensor
- 3. USB slot
- 4. Play/pause button
- 5. Preview button
- 6. Stop button
- 7. Next button
- 8. Open/close button
- 9. Power button

Rear panel identification

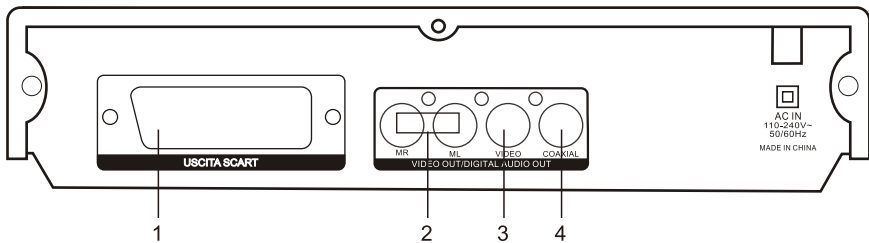

- 1. Scart output
- 2. R/L stereo audio output
- 3. Video output
- 4. Digital Coaxial output

 Remote control panel identification

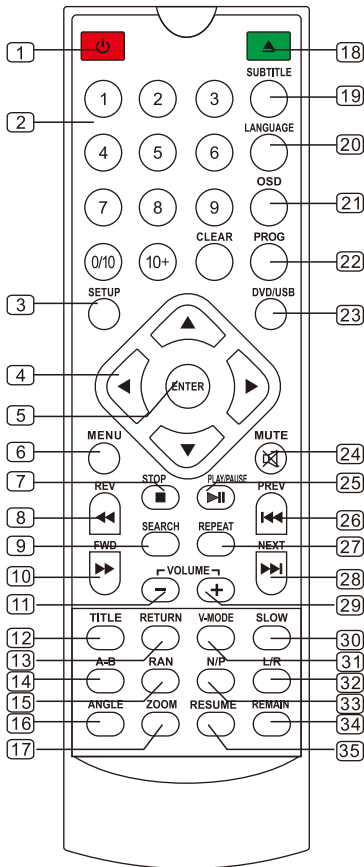

- | | | | |
|----|-------------------|----|---------------|
| 1 | Power on/off | 31 | V-mode button |
| 2 | Number keys | 32 | L/R button |
| 3 | Setup button | 33 | N/P button |
| 4 | Direction button | 34 | Remain button |
| 5 | Enter button | 35 | Resume button |
| 6 | Menu button | | |
| 7 | Stop button | | |
| 8 | REV button | | |
| 9 | Search button | | |
| 10 | FWD button | | |
| 11 | Volume - button | | |
| 12 | Title button | | |
| 13 | Return button | | |
| 14 | A-B button | | |
| 15 | RAN DOM button | | |
| 16 | Angle button | | |
| 17 | Zoom button | | |
| 18 | Open/close button | | |
| 19 | Subtitle button | | |
| 20 | Language button | | |
| 21 | OSD button | | |
| 22 | PROG button | | |
| 23 | DVD/USB button | | |
| 24 | Mute button | | |
| 25 | Play/pause button | | |
| 26 | PREV button | | |
| 27 | Repeat button | | |
| 28 | Next button | | |
| 29 | Volume + button | | |
| 30 | Slow button | | |

Note:

The same buttons on remote control and front panel have the same function.

2. Preparations

2.1 Accessories


1. Remote controller
 2. Audio/Video cable
 3. User's manual
 4. Batteries
 5. Guarantee letter
- (Check whether it is fully equipped after opening the box).

2.2 Battery installation of remote controller

Place two AAA batteries in the battery compartment. Be sure the polarities are correct. There should be no large obstacles between the remote controller and the main unit.

2.3 System connection

- (1) When making connection between this unit and other components, be sure all connections are power-off.
- (2) Audio/Video cables are connected according to the different colour identification and they should be fitted firmly.
Yellow to video terminal
White to audio terminal(L)
Red to audio terminal(R)
- (3) Scheme of connection

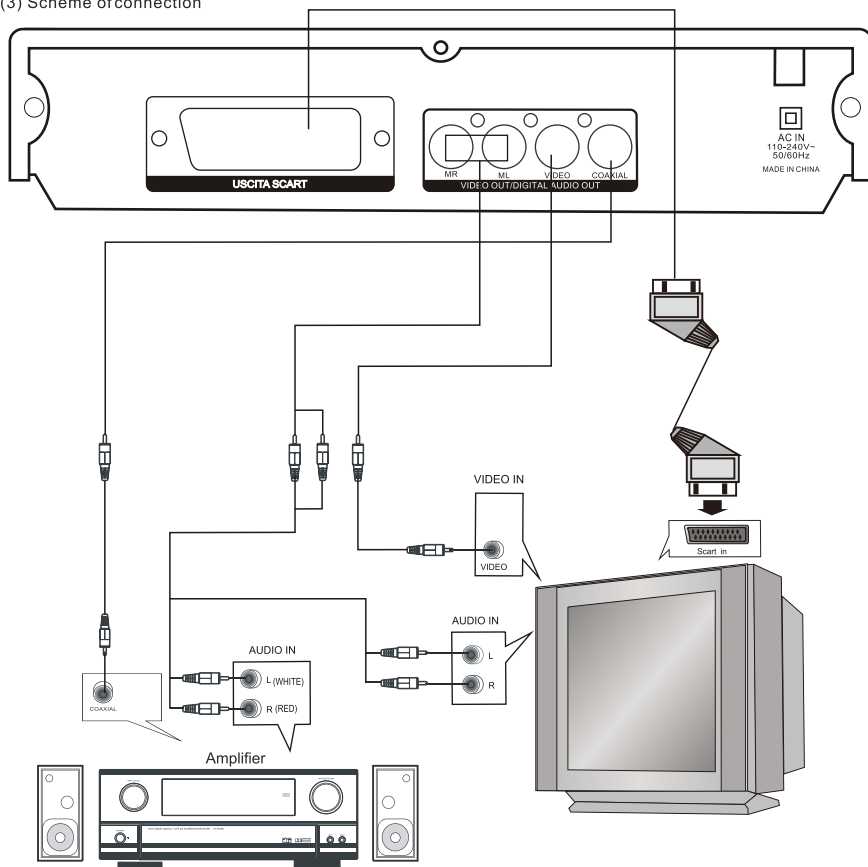

2.4 Play mode setting

If you found the picture could not spread all screen or no color, please select PAL, NTSC or auto by pressing (P/N) key.

3. Basic operation

Please use remote control to operate the function as described below:

Once all the connection of the system have been done, this machine will be ready for service. Prior to play, make sure to complete the following preparatory operations.

1. Switch on TV and select AV mode. If it's S-Video connect select S-Video mode.
2. Switch on amplifier if it is connected, select AC-3 or DVD mode.
3. Plug-in of DVD player

Step 1: Press STANDBY button, Disc Loading shown on screen.

Step 2: Press (OPEN/CLOSE) key on the front panel, the tray comes out automatically.

Step 3: Place disc on the tray, press (OPEN/CLOSE) key to close the tray, the disc type will be shown on the upper left corner of the screen.

Note: Press (STANDBY) key on the remote controller to bring the unit into standby status.

3.1 Play disc

Please use remote control to operate the function as described below:

- Once it has read the disc, this machine will start playing automatically.
- In order to see the folder menu inside a disc, press (STOP) button first and then prog.
- If it is a DVD, the machine will show the DVD menu or title menu.
- If it is a VCD2.0 disc, the machine will activate PBC playback control status.
- If it is a CD, this machine will start playing in the sequence.

Press (PLAY) key to return play back while disc stop, pause or step.

PAUSE key:

Press (PAUSE) key to put the playback in temporary halt.

PREV key: ⏮

Press (PREV) key to skip backward to the title before current.

NEXT key: ⏭

Press (NEXT) key to skip forward to the title after current.

REV key: ⏪

Press (REV) key to get 2X, 4X, 8X, 16X, 32X or normal play circular fast reverse function on disc playing.

FWD key: ⏩

Press (FWD) key to get 2X, 4X, 8X, 16X, 32X or normal play circular fast reverse function on disc playing.

STOP key:

Press (STOP) key first time to follow by a (PLAY) key will an auto resume to the last played location. Press (Stop) key twice will halt the playback completely.

VIDEO key:

Press (V-MODE) key to select the signal source: CVBS, RGB

4. Description of function

Please use remote control to operate the function as described below:

4.1 OSD

In the condition of DVD displaying, press (OSD) key on the remote controller to display the elapsed time of the current title, remain time of the current title, remain time of the current chapter, total title, current title, total chapter, current chapter and other information of the disc. In the condition of VCD disc playing, press (OSD) key on the remote controller to display single elapsed time, single remain time, display off and other information of the disc circular.

4.2 Play mode

Press (N/P) key repeatedly to get PAL, AUTO, NTSC display on the screen.

4.3 Subtitle

This function may enable you to select multi subtitle languages (as many as 32 kinds and only for the disc with multi subtitle encode). Press (SUBTITLE) key to get desired display. For example, to select language 2 from 8 options.

4.4 Angle

During athletic match, concert or theatrical program, press (ANGLE) key continually on remote controller to select various angle to view the same image (This operation works only for the disc with multi angle encoded).

4.5 Audio

There are 8 kinds of language for selection. Press (AUDIO) key to select language (this operation works only for the disc with multi language encoded). For example, to select language 1 from 2 language options, sound field effect AC-3, 2 channels, English.

4.6 Title

For DVD displaying, press (TITLE) key to get title menu.

4.7 Menu/PBC

Press (MENU) key to return to main menu for DVD disc playing.

For VCD 2.0 disc playing, in the condition of PBC ON, song selection can only be done when the playing returned to the main menu. In the condition of PBC OFF, press relevant number key to get favorite song during playing.

4.8 Direction key

There are four direction keys to assist in navigation. They are normally use while in title, navigation, and setup menu.

4.9 Number key

Press relevant number key to play the favorite chapter or title according to the number on the menu.

4.10 Repeat A - B

First time pressing (A-B) key to set initial point (A);
Second time pressing (A-B) key to set end Point (B)
After setting, the program repeats playing from A to B.
Third time pressing (A-B) key to cancel repeat.

4.11 Repeat

For DVD displaying, press (REPEAT) key to repeat title, chapter, all or close repeat. For VCD disc playing, press (REPEAT) key to repeat track, all or close repeat.

4.12 ZOOM

The picture may be enlarged by up to 4 times to facilitate you to enjoy a particular action or still picture. Press (ZOOM) key 3 times, the ZOOM scales will be 2x, 3x 4x respectively. Pressing direction key to move the screen while zoom in. Pressing the button once again will return to normal play status.

4.13 Volume and Mute

Press (VOL+) key to increase volume, press (VOL-) key to reduce volume till to no volume output. Press (MUTE) key to get mute, press it again to recover it from mute.

4.14 L/R

When play SVCD, VCD or CD disc, press (L/R) key to select mono left, Mono right, mix mono, stereo.

4.15 PROG

In the condition of disc playing, press (PROG) key on remote controller to come into program status; Enter the track Numbers desired, 2, 4, 6 and 8, for example, if you enter wrong number, you can press direction key move the cursor to wrong point, again input the numbers, when finished, then using direction key move the cursor to start button, then press (ENTER) to start playing. Select (exit) and press ENTER to exit the program function.

4.16 SLOW

Press (SLOW) key repeatedly, you will enjoy the slow motion at a 1/2, 1/4, 1/8 and 1/16 slower forward speed.

4.17 RESUME

During DVD playback, press (STOP) button and then resume to start playback from the point it was stopped before.

5. SETTING OF THE SYSTEM

1. DVD menu setting

Press the SETUP button on the remote controller, the SETUP MENU (main) will be displayed.

1. After accessing the SETUP Menu, press the direction buttons for up and down movement to select and item desired, then press the (ENTER) button to confirm your entry and move to the sub-menu. Use the left and right direction buttons to move the pointer, and the up and down direction buttons to select the option desired. Also, press the (ENTER) button to confirm your selection, press left direction button to return the last menu. Now, setup of the current function is completed.

2. To end the setup, press the SETUP button again. In the SETUP MENU, you may choose any of the following options as you like.

LAST MEMORY

DVD Playback is resumed from the point it was stopped last time.


 
 
 
 
 
 



GENERAL SETUP

This option is used to setup TV screen format, video functions and DVD functions, with options of "TV DISPLAY", "ANGLE MARK", "OSD LANG", "CAPTIONS", "SCREEN SAVER", "HDCD", "LAST MEMORY".



TV DISPLAY

Regardless of what screen format is chosen, if the screen displays in 4:3 format, the picture can only be shown in that format. With DVDs, the screen format is convertible. If the screen displays only in 4:3 format, when a DVD with 16:9 display format is used, the picture will be flattened.

TV screen Film format	4:3			16:9
	Normal	Full view	Mailbox	Wide screen
4:3 				
16:9 				

ANGLE MARK

When a DVD providing multiple angles is used, the user may select a particular shooting angle. The operating instructions stated in "Angle Mark".

OSD LANG

The user may use this item to set the language of the setup menu and screen display to English, French, German, Italian.

The operating instructions stated in "OSD Language".

CAPTIONS

Set captions is "on", "off".

Note: This function is working with NTSC discs only.

SCREEN SAVER

If the screen saver is on, when your DVD player is in Stop, Open, or No Disc state, or there is a frame frozen for more than 180sec, the screen saver will be displayed. This feature can protect the screen from damage.

ON: Choose this setting to activate the screen saver.

OFF: Choose this setting to cancel the screen saver.

HDCCD

Set HDCCD is "off", "1X", "2X".

AUDIO SETUP

Includes DOWNMIX , SPDIF OUTPUT setup.



Speaker Setup

Downmix

This setting is suitable for films. set angle audio out is Lt/Rt or Stereo.

Lt / Rt: Choose this setting, it will be sound like in a movie theatre if the original movie the disc was recorded from was encoded in the Pro Logic Dolby Digital format.

STEREO: Choose this setting, when 5.1-channel sound playing, two channels of signals will be output from the left and right soundtrack; when 2-channel sound playing, stereo signal will be output.

Spdif Setup

Spdif Output

Audio digital signals can be output through COAXIAL in rear panel. There are 3 optional audio output modes: spdif off, spdif/raw and spdif/pcm.

- a) SPDIF OFF: From the Coaxial Output jack, no signal is output.
- b) RAW: Choose this setting if your DVD player is connected to a power amplifier with coaxial cable. When playing a disc recorded with Dolby Digital, and MPEG audio formats, the corresponding digital signals will be output from the Coaxial Output jack. This player's digital output jacks are designed for a connection to a Dolby Digital, or MPEG receiver or decoder.
- c) PCM: Choose this setting if your DVD player is connected to a 2-channel digital stereo amplifier; When playing a disc recorded with Dolby Digital and MPEG audio formats, audio signals will be modulated into a 2-channel PCM signal, and it will be output from the Coaxial Output jack

DOLBY SETUP

Dolby digital setup includes DUAL MONO and DYNAMIC range compress.



DUAL MONO


If you have Dolby digital output in your amplifier/decoder, you may select stereo, L.Mono R.Mono and Mix.Mono sound accordingly.

DYNAMIC

Choose this setting to adjust the dynamic ratio and get different effect. If adjusting to FULL, the audio signal peak value will be the minimum; while adjusting to OFF, maximum.

VIDEO SETUP

Includes Component, Quality.

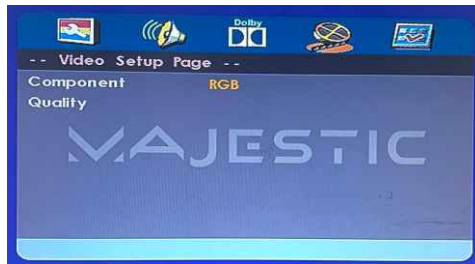

COMPONENT

CVBS: Choose this setting if your DVD player is connected through cvbs output.

RGB: Choose this setting if your DVD player is connected through scart cable.

SHARPNESS

Set SHARPNESS mode,there are 3 optional modes:High,Medium and Low.

BRIGHTNESS

Press right arrow button to enter adjustment BRIGHTNESS mode; press up and down buttons to make adjustment.

Press left arrow button to return to setup menu.

CONTRAST

Press right arrow button to enter adjustment CONTRAST mode ; press right and left buttons to make adjustment.

Press enter button to return to setup menu.

PREFERENCE SETUP

During stop mode, press the SETUP button to access the PREFERENCE setup menu, which includes items of TV TYPE,AUDIO Language, SUBTITLE, DISC MENU language, PARENTAL, DEFAULT and PASSWORD.

Preset values are essential to a DVD player. The user may change these items as desired.



TV TYPE

According to the Color System of the TV, you can choose the TV System.

a. NTSC: Choose this settings if your DVD player is connected to a NTSC TV.

The United States uses NTSC, while Europe uses the PAL broadcast system.

If your picture is colorless and rolling, you have chosen the incorrect broadcast system.

Press the N/P button to change the system back.

b. PAL: Choose this settings if your DVD player is connected to a PAL TV

c. AUTO: Choose this settings if your DVD player is connected to a multi-system TV.

AUDIO LANGUAGE

Choose the audio language your prefer. if the disc you are playing has that language available, it will output that language,this machine provides English,French,Spanish, Italian, German.

SUBTITLE LANGUAGE

Choose the subtitle language your prefer. if the disc you are playing has that language available, it will display subtitle in that language,this machine provides English,French,Spanish, Italian, German, OFF.

DISC MENU LANGUAGE

Choose the disc menu language your prefer. if the disc you are playing has that language available, it will display the menu in that language, this machine provides English, French, German, Italian and others as the built-in disc dubbing language options.

PARENTAL

For a film to be restricted for children, the film class may be set according to label marking on the disc. High light "PARENTAL" in the preference setup menu need confirm the pass-word mode is off.

PASSWORD

The default is "136900 " The user may change it using this option.

The password option is initialized locked, and you cannot set the ratings limit or change the password. In order for the Ratings feature to work, the password mode must be turned on. If you want to set the ratings limit, you will need to enter the default password which is 136900 then press Enter to confirm. To change the password, you will be prompted for the old password, then be prompted for a new.

Enter a 6-digit number (this is you password). Please remember your PASSWORD, as the DEFAULT setting will not revert the PASSWORD to the factory defaults.

DEFAULT

This option will resume the original settings of this machine except the PASSWORD.

6. OPERATION OF MP3 FUNCTION

MP3 is an audio compression mode using Level 3 of the international standard MPEG, whereby sound signal is compressed in a rate of 12:1. AMP3 disc can record music for play of over 600 minutes or record over 170 songs, rivaling CDs in sound quality.

To play a MP3 disc

Select the track using direction buttons

1. Follow the basic operating instructions to insert a MP3 disc, this machine will start to search the information on the disc and show it in the display.
2. Press direction key to select MP3 file and press ENTER key to play.

Repeat play

Using this function, the user will be able to enjoy a particular song or all the songs on the disc over and over again.

1. Choose a particular song to be repeated.
2. Press the REPEAT button you can choose folder repeat or cancel the repeat function.

Other functions:

When a MP3 disc is played, the features of mute, volume control, pause and forward and backward search will also be available. The operations are the same with those of CDs.

7. JPEG

JPEG adopting the most efficient compression is widely used as picture storage type flattened and stored format.

Even if pictures are compressed 15-20 times. They still have good effect. Supported by most picture processing software, fit for picture storage, it has small date and easy use. This machine can read. JPEG-format picture CD disc.

Select to play by menu

1. Put in disc, the machine searches disc information and main menu displays on screen. Press number key from 1 to select picture, press play key to make sure.
2. Press direction key to select picture, then press ENTER key to make sure.
3. In condition of stop, select direction key to select other pictures.
4. In condition of stop, select the first line file item on the right, then press play key to return to upper menu

Other functions:

When playing picture CD. The machine allows pause, repeat and browsing. Use the Next or Previous key to browse. Press ZOOM key to enlarge picture. While in zoom mode press fast forward or backward key to control the zoom scale. To move the view area of the enlarged picture, use the direction keys.

In view mode, pictures can be rotated with direction keys. The type of slide show transition can be selected from the navigation menu or simply by pressing PROGRAM key.

NOTE:

If the disc contains more than one folder with different file formats, playback will start from the first file; to enter folder menu press STOP button first and then prog.

USB:

The unit can be connected to a flash memory USB to play the files inside. It is not guaranteed the compatibility for players using owner software.

Insert an USB device in the port, when DVD is playing press DVD/USB button on remote control to switch to USB mode, after few seconds playback will start.

Press STOP and Prog to enter in the device folders, choose desired folder and press Enter or Play to Enter and start playback.

8. Trouble shooting guide

For your convenience, we have enlisted some points to help solve problems you might encounter while using DVD player.

No sound

- * Make sure the good connection between player and other appliances such as power amplifier or TV.
- * Make sure the right operation on TV and power amplifier.

No picture

- * Make sure the good connection between player and other appliances such as TV.
- * Make sure TV works well.
- * Make sure the DVD player is in correct mode, otherwise, press VIDEO button several times to solve it.

Disc does not play

- * Make sure the disc is loaded correctly (label side is facing up on the disc tray)
- * Make sure the disc is clear.

Remote controller does not work

- * Move the obstacle between player and remote controller away.
- * Point the remote controller at the remote control sensor.

- * Check the battery.

Picture dividing

- * Make sure the disc is clear and no any scratch on it.
- * For the player is controlled by micro-computer, if encountering problem, switch off the power first, and switch on again in a few second, by then if no mistake is displayed, the player could work well.

SAFE MODE

The main unit will be in safe mode if it does not respond to any operation due to interference by accident or strong noise signals. To resolve this problem, you must pull out the power cord and plug it in again later 10 seconds.

NOTES ON CONDENSATION

Occasionally, condensation may occur within the device, resulting in drops of water forming on the optical pick-up inside the unit. This is much like the condensation that takes place on a glass of cold water. This condensation may affect the overall performance of the machine.

Condensation occurs when:

- 1) It is moved from a cold area to a warm area.
- 2) Its surrounding area is exposed to a sudden change in temperature, for example, when located near an air conditioner.
- 3) In summer, the unit is moved from a hot and humid environment immediately into an air-conditioned room.
- 4) The device is in a humid environment.

9. CARE OF DISCS

Protection

- a. When loading or removing the discs, always hold them by the center and edge.
- B. Do not stick or write anything on the surface. Protect discs against any fingerprint.

Cleaning

- Wipe the discs from time to time using a soft cloth.
- Always wipe from the center toward the edge.

Storage

- a. Never warp the discs. During no-use periods, store them in their cases, while should be kept vertically. Do not expose discs to high temperature, dampness or extremely low temperature, or else to may cause damage to the discs.
- b. Do not expose discs to direct sunlight.

The DVD player contains laser devices. The top cover of the DVD module acts as a protective housing. Laser radiation is dangerous when the top cover is removed or opened. Avoid direct exposure to beam during service or repair.

Manufactured under license from Dolby Laboratories. "Dolby", and the double-D Symbol are trade marks of Dolby Laboratories.

This product incorporates copyright protection technology, that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

10. Technical Specification

Type	DVX 475USB
TV mode	PAL/AUTO/NTSC
Disc mode	MPEG4,DVD, VCD,CD, MP3, CD-R, JPEG Picture CD
Resolution	≥500 lines
Video S/N ratio	≥56dB
Frequency response	20Hz-20KHz+/-1 dB
Audio S/N ratio	≥ 90dB
Dynamic range	≥ 90dB
Distortion	< 1%
D/A converter	96KHz/24bit
Video output	1V _{p-p} (75 Ω)
Audio output	2.0V
Digital audio output	Coaxial
Channel	2
Power voltage	110-240V~50Hz/60Hz
Consumption	10w MAX-1W STANDBY

Specifications are subject to change without notice.

INFORMATION TO USERS OF DOMESTIC EQUIPMENT



Pursuant to Art. 25, Paragraph 1 of the Legislative Act N. 49 14th March 2014, "Implement of the Directives 2011/65 / EU and 2012/19 / EU concerning the reduction of the use of hazardous substances in electrical and electronic equipment, as well as waste disposal".

The crossed bin symbol on the appliance or on its packaging indicates that the product at the end of its useful life must be collected separately from other waste. The user must, therefore, dispose the equipment at the end of its life to the appropriate electronic and electro technical waste centers, or return it to the retailer at the time of purchase of a new type of equivalent equipment, one by one.

Appropriate separate disposal for the subsequent start-up of the disused equipment for recycling, treatment and compatible environmental disposal helps to avoid possible negative effects on the environment and health and favours the re-use and / or recycling of the materials it is composed the equipment.

The illegal disposal of the product by the user involves the application of the penalties referred to in current laws.

Any rechargeable batteries or rechargeable batteries contained in the device must be disposed separately in the appropriate expired batteries bins.

Battery disposal



Disposal of expired batteries must take place at the appropriate recycling centers or according to local authority. Batteries in compliance with the 2013/56 / EC directive.

Warning: the battery may explode if replaced incorrectly, if exposed to heat or water. Do not cause short circuit. Replace the battery only with an equivalent. Do not place the battery in direct sunlight or in places excessively hot (over 40 ° C). use only with the adapter provided by the anufacturer. Do not hit or press the battery.



Class II, double insulation



WEEE Logo (Waste electrical and electronic equipment)



Battery disposal



Internal use

