

MAJESTIC

DF 820HD MP3



New Majestic SPA Via Rossi Martini 41, 26013 Crema (CR)
www.newmajestic.com

MADE IN CHINA



CONTENTS

1. Product Diagram.....	6
1.1 Remote Control.....	6
1.2 Back side Buttons	7
1.3 Back side of the frame	7
2. Installing & Replacing the Battery	7
3. Getting Started	8
4. Operating Instruction	9
4.1 Main menu	9
4.2 Memory	10
5. Photo	10
6. Music	11
7. Video.....	11
8. Calendar.....	12
9. File.....	13
10. Setting	14
10.1 Photo setup	15
10.2 Calendar setup.....	15
10.3 Video setup.....	15
10.4 Music setup.....	15
10.5 System setup	16
11. Screensaver.....	16
12. PC Connection.....	17
13. Technical Specifications.....	17
14. Troubleshooting Guide.....	18

SAFETY WARNINGS

For safe use and maximum performance, please read this manual carefully before use.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT DISASSEMBLE THE APPLIANCE. THERE ARE NO USER SERVICEABLE PARTS. FOR REPAIRS CONTACT QUALIFIED TECHNICAL STAFF.

To avoid the danger of electric shock or fire, do not expose to rain or moisture.



DANGEROUS VOLTAGE!



The symbol to the side warns the user of the presence of voltage that could not be isolated and may cause electric shock.



This symbol warns the user that before using the unit, it is necessary to carefully read the instruction booklet.

IMPORTANT NOTES

- The use must be allowed only to adults and responsible persons, adequately educated on the damages deriving from incorrect use.
- This appliance can be used by children aged 8 and over if they are under supervision or if they have received instructions regarding the safe use of the appliance and if they understand the dangers involved. Cleaning and maintenance operations by the user must not be carried out by children unless they are over 8 years of age and operate under supervision. Keep the appliance and its cord out of the reach of children under the age of 8.
- The devices can be used by people with reduced physical, sensory or mental abilities or with a lack of experience and knowledge if they are supervised or if they have received instructions regarding the safe use of the appliance and understand the dangers involved.
- Children must not use the appliance as a game.
- Do not allow the appliance to be used by children or the disabled without supervision.
- Keep away from pets.

- Never use the appliance in places where the cord, plug and the product itself may come into contact with water or wet surfaces. Do not use the appliance outdoors, as rain could create short circuits. Do not touch the appliance with wet hands.
- Avoid installing the unit in the locations listed below:
 - Places exposed to direct sunlight or close to equipment that generate heat, such as radiators;
 - Above other stereo equipment that may radiate excessive heat;
 - Places that block ventilation or are humid or dusty;
 - Environments subject to constant vibration;
- Do not place accessories with naked flames, such as lighted candles, on the appliance.
- Do not try to repair or intervene on the appliance yourself. Incorrect interventions or tampering can void the guarantee. In the event of any damaged parts or suspected malfunction, discontinue use immediately and consult qualified personnel. Never immerse the appliance in water or other liquids. Do not place items containing liquids (such as vases) on top of the appliance.
- Do not touch the appliance with wet hands and do not place it near sinks, tubs or containers of liquids.
- Use the product only if it is in perfect condition. If the appliance has been immersed in water or is damaged, contact qualified personnel. The product should not be used if it has been dropped or if there are any visible signs of damage.

Exposure to high volume levels can cause hearing problems, including permanent damage. The predisposition to hearing loss varies from person to person, however constant exposure to high volume levels is harmful to anyone. Moderate the volume level.

Cleaning the LCD Screen

- Treat the screen carefully. Because the screen of the Digital Photo Frame is made of glass and it would easily be broken or scratched.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

Introduction:






 



 


Thank you for the purchase of the Digital Photo Frame. It is designed to allow quick and easy view of photos taken from your digital camera, mobile phone, or from a memory storage card. Please read this User Manual carefully to learn the correct way to use the Digital Photo Frame.

Packaging Check List:


- 10.1 inch digital photo frame
- AC/DC adaptor
- User manual
- Bracket stand
- Remote control
- Warranty card

1.Product Diagram


1.1 Remote Control

	1  – Slide show with background music
②	2  MUTE – Switch off the sound
③	3 MOVIE – Movie playback mode
④	4 PHOTO – Photo playback mode
⑤	5 MUSIC – Music playback mode
⑥	6  – Play/Pause: During playing, press this button for pause, repress for play
⑦	7  – Left Directional key
⑧	8 ENTER – Press to confirm
⑨	9 SETUP – Accessing the settings menu
⑩	10 VOL+ – Turn up the volume
⑪	11 VOL- – Turn down the volume
⑫	12  – Fast forward
⑬	13  – Move forward to next music or video file
⑭	14  – Fast backward
⑮	15  – Move back to previous music or video file
⑯	16  – Down Directional key
⑰	17 CALENDAR – Enter the calendar mode directly
⑱	18  – Right Directional key
⑲	19 EXIT – Return to upper menu
⑳	20  – Up Directional key
㉑	21  – Power on / off

 1.2 Back side Buttons

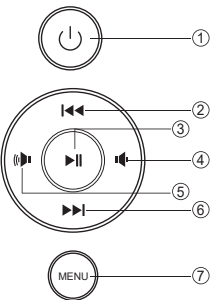
	1	Power On / Off
	2	Up / Previous
	3	Play / Pause/OK
	4	Left / Volume-
	5	Right / Volume+
	6	Down / Next
	7	Menu / Exit

 1.3 Back side of the frame

	1	SD / MMC / SDHC Card Reader
	2	Headphone Output
	3	USB 2.0 Port
	4	Mini USB Port
	5	DC Power Input

2. Installing & Replacing the Battery

 - Unscrew battery cover and remove.
- Properly dispose of exhausted batteries.
- Insert 2 new AAA batteries.
- Be sure the positive (+) and negative (-) ends of the batteries are facing the correct direction.
- Replace the battery cover.
- Do not mix old and new batteries.
- Do not mix alkaline standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

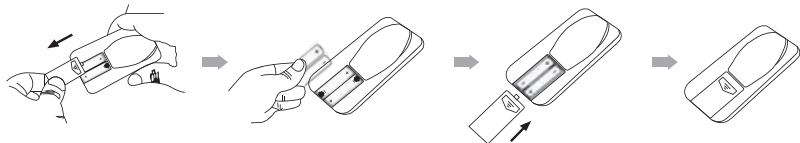

Using of Remote Control

Point the remote control towards the main unit when operating. The remote control works best at a distance less than 3 m and at an angle of up to 30 degrees to the front of the unit. No obstacles may stand in the way between remote control and infrared sensor and do not place the remote control in direct sunlight. If the remote control fails to work even when it is operated near the player, replace the battery.

Notes on batteries

 
If the remote control is not used for a long period of time, please remove the battery from the compartment.

Do not heat batteries or dispose of them in fires.

Do not dismantle, deform or modify batteries.

3. Getting Started

- Screw the support in the appropriate hole on the back of the unit:

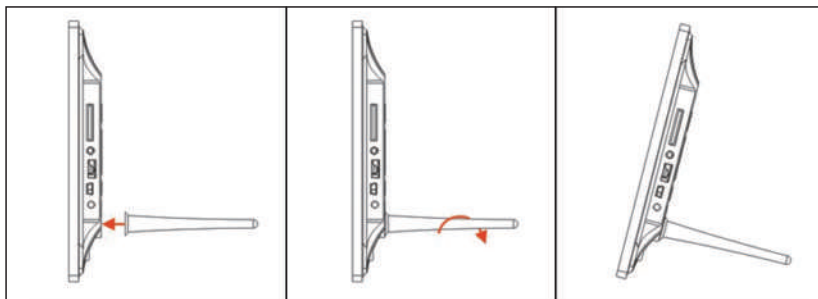

- Insert the power adaptor cable in the unit and connect to the power supply. The unit will turn on automatically.
- Insert a supported memory device (**SD/SDHC/MMC** card and USB device). Once a device is inserted pictures playback will start automatically.
- Press power on/off switch on the back of the unit to turn on/off.

4. Operating Instruction

4.1 Main menu

In main menu you can access all the functions of the unit (Photo/Music/Video/File/Calendar/Setup).

To navigate inside the menu press ◀ ▶ key and confirm with **ENTER**.

Press **EXIT** during playback to go back to main menu.



In main menu you can select the storage to display by pressing **EXIT**. Only detected storage will be selectable (by using ◀ ▶ keys) and confirm with **ENTER**.



4.2 Memory

The Frame supports SD/SDHC/MMC Cards and USB 2.0. After inserting a card or USB device, the frame plays automatically the file format you selected in the Auto-start Menu.

Nota:

Make sure there are supported Picture files on the Card or USB device. The unit has a built-in memory (about 220kb) which allows to insert few pictures of small size which can be played and used as screensaver. It is possible to transfer file in the built-in memory by connecting the unit to PC through miniUSB port (the unit will be detected as removable device by Windows) or by using the option Copy available in the File mode (after having inserted a storage which contains compatible files). It is possible to remove files from the built-in memory by connecting the unit to PC or by using the option "Delete file" inside the function "File" (after having selected the built-in memory from the main menu).


5. Photo

Select **Photo** and confirm with **ENTER** or press **Photo** to start slideshow.

During playback press **EXIT** to view all the pictures available in the selected memory. Use navigation keys to select the image and press **ENTER** to display.

Use **▶||** key to stop/resume slideshow. Pressing **◀◀** it is possible to use Zoom function. By using **▶▶** it is possible to rotate the picture. To switch between previous/next image use **▲▼** keys.

 To play back the slideshow with background Music, (Music must be stored in the same memory device) press **🎵**. You can use **◀◀ ▶▶** to go to the previous/next background music.

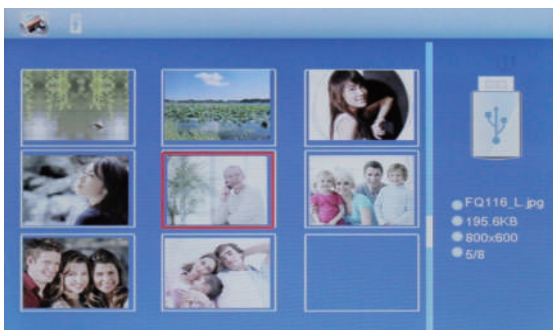


6. Music

Select **Music** Icon and press **ENTER** to confirm, press **Music** key to start playback.

Press **▲▼** to select a track and confirm with **ENTER**. Press **▶||** to stop/resume playback.

By using **◀▶** you can rewind or fast forward inside the track. With **◀◀ ▶▶** you can enter the previous or next track directly.

 Press **VOL+/-** to turn up/ down the volume.

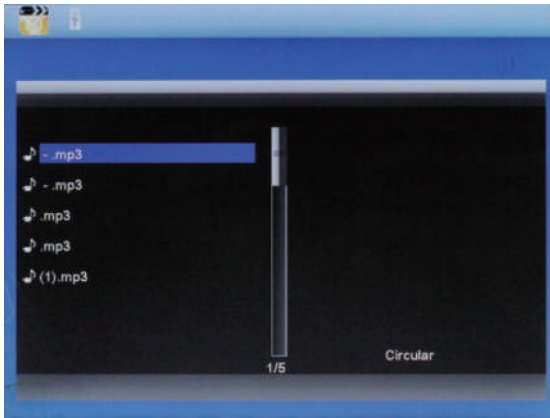

7. Video

Select the **Video** Icon and press **ENTER** to display the list of video files available in the memory. By pressing **Movie** key it is possible to start automatically playback of video.

Press **▲▼** to select the video from the playlist, then press **ENTER**. Press **VOL+/-** to turn up/ down the volume.

During Video playback press **◀▶** for fast backward and fast forward. Press **◀◀ ▶▶** to switch to previous or next video.

Press **▶||** to pause/Play. To go back to video list press **EXIT**.



8. Calendar

Select **Calendar** in the Main Menu, press **ENTER** to confirm or press **Calendar** key to display calendar. The calendar will be shown on the right side of the screen. On the left side a slideshow will start with the supported Picture files available in the selected storage device.

Adjust date with ▲▼◀▶.



 
9. File

Select **File** in the main menu and press **ENTER**. You can browse all files on your selected storage device.

Press **▲** or **▼** to choose the file and press **ENTER** to open the file or folder.

Press **EXIT** to go back to previous folder or main menu.

By pressing **►** it is possible to copy (in the built-in memory) or delete the selected file.

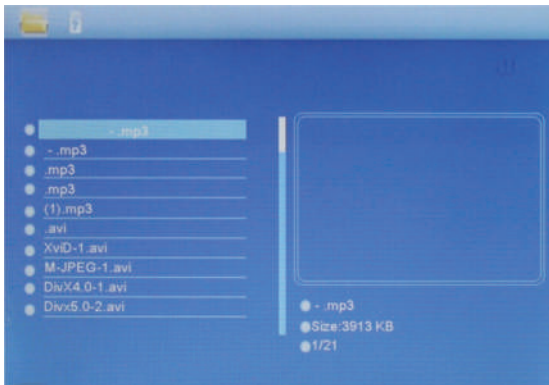

10. Setting

Select **Setting** in the main menu and you can manage photo, calendar, video, music and system setup.

Choose **Setting** interface and press ▲▼ to highlight your selection.

Press **ENTER** to access the sub-menu items.

Press ◀ ▶ to select the available options and confirm with **ENTER**.

Press **EXIT** to go back.



10.1 Photo setup

Display mode	Play/Thumbnail	Starts slideshow automatically or display thumbnail.
Music	Off/On	Background music
Display ratio	Full screen/Original size/Scale	
Slide speed	3 Sec./5 Sec./15 Sec./30 Sec./1 Min./5 Min./15 Min./30 Min./1 hour	
Slideshow repeat	On/Off	
Slideshow effect	Random/Fly in/Chessboard/Cut/Erase/Louder/Random Line/Reverse/Cube/Rotate/Off	
Slide mode	Single window/Two windows/Triple windows/Four windows	Number of pictures to display during slideshow.
Photo random slideshow	Random/Sequence	You can choose to play slideshow in sequence or random.

10.2 Calendar setup

Date	YYYY-MM-DD
Clock time	HH:MM
Set time format	24/12
Alarm status	Off/On
Alarm time	HH:MM
Alarm frequency	Once/Every day/Workday/Weekend
Alarm volume	1-10

10.3 Video setup

Play mode	Repeat all/Random/Random repeat/Sequence/Repeat one
Display ratio	Scale/Full screen/Original size

10.4 Music setup

Play mode	Repeat all/Random/Random repeat/Sequence/Repeat one
------------------	---

10.5 System setup

Language	Italian/Slovenian/Spanish/Danish/English/Japanese/French/German	
Grayscale	1-100	
Brightness	1-100	
Contrast	1-100	
Power off	Off/HH:MM	This function allows to turn off the unit at the set time.
Power on	Off/HH:MM	This function allows to turn on the unit at the set time.
Auto-Power frequency	Once/Every day/Workday/Weekend	This function allows to choose when the unit should turn on/off automatically.
Start up mode	Custom mode/Off/Photo/Music/Video/Photo & Music/Calendar/	This function allows to choose which function should start automatically when inserting storage device. Custom mode will start video playback automatically and repeat(if available), if no video it will play photos (if available) or music files(if available).
Version		
Reset setting	It allows to restore unit to factory default	

11. Screensaver

If no storage device is inserted, after 5 minutes idle it will start slideshow with the pictures saved inside built-in memory (if there are files inside).

12. PC Connection

You can connect the unit to the external equipment by using mini USB Cable (not included) to manage contents (if the unit contains a USB device it will be visible from PC, otherwise it will display built-in memory and eventually SD card inserted).



NOTE: Never disconnect the USB cable during any operational process. Doing so may damage your DPF. Press Safely Remove Hardware Icon on the computer to disconnect the PC-Connection. The unit supports Windows XP/Vista/7/8/10.

13. Technical Specifications

Adapter	Input: AC 100/240V-50/60Hz. Output DC 5V / 1,5A.
Picture format	JPEG, PNG, GIF, BMP
Audio format	MP3, WMA
Video format (max resolution 720p, max bitrate 20Mbps)	MP4, WMV, 3GP, MOV, MPEG -1/2/4, H.263, H.264, XVID, AVI, MKV
Memory cards	SD/SDHC/MMC (fino a 32GB)
USB	USB 2.0/ miniUSB (cable not included)
Display	10.1" TFT LCD Resolution 1024x600 pixels Aspect Ratio 16:9

14. Troubleshooting Guide

If you come across when using the photo frame on problems, consult the suggested solutions below, and the corresponding sections of this manual. If you need additional assistance, please contact technical support.

No power:	Please check whether the AC-Adaptor is inserted correctly.
Remote control has no function:	Please check whether the battery has power. Replace with a new battery if necessary.
Cannot read the Memory Card or USB-Device:	Please confirm there are supported files on your memory card or USB device. Empty devices cannot be read.
Cannot play the file:	Please confirm if the file format is compatible with the player.
Display too bright or too dark:	Please adjust the brightness or contrast in the setup menu.
No sound:	Please check whether the volume is correct and the player is not in Mute mode.
Copy file error (memory full)	The file you want to copy in the built-in memory is too big, free some space and try again.



 = Classe III / Class III

Questa apparecchiatura è progettata per essere alimentata da una fonte di alimentazione di sicurezza a bassissima tensione, in cui la tensione è sufficientemente bassa da consentire a una persona di entrarvi in contatto in sicurezza senza il rischio di scosse elettriche.

Pertanto le caratteristiche di sicurezza integrate negli apparecchi di Classe I e II non sono richieste.

This equipment is designed to be supplied from a safety extra-low voltage power source, where the voltage is low enough that a person can safely come into contact with it without risk of an electric shock. Therefore the safety features built into Class I & Class II appliances are not required.

 = Uso interno / Indoor use

 = Classe II, doppio isolamento / Class II, double insulation

 = Logo RAEE (Rifiuti di apparecchiature elettriche ed elettroniche) / WEEE Logo (Waste electrical and electronic equipment)

Eco-contributo RAEE assolto ove dovuto- N° Registro AEE: IT08020000001647

Eco-contributo PILE assolto ove dovuto- N° Registro PILE: IT19070P00005533