


MAJESTIC

TS 100BT USB/SD/AX Bluetooth multimedia audio system

Instruction manual

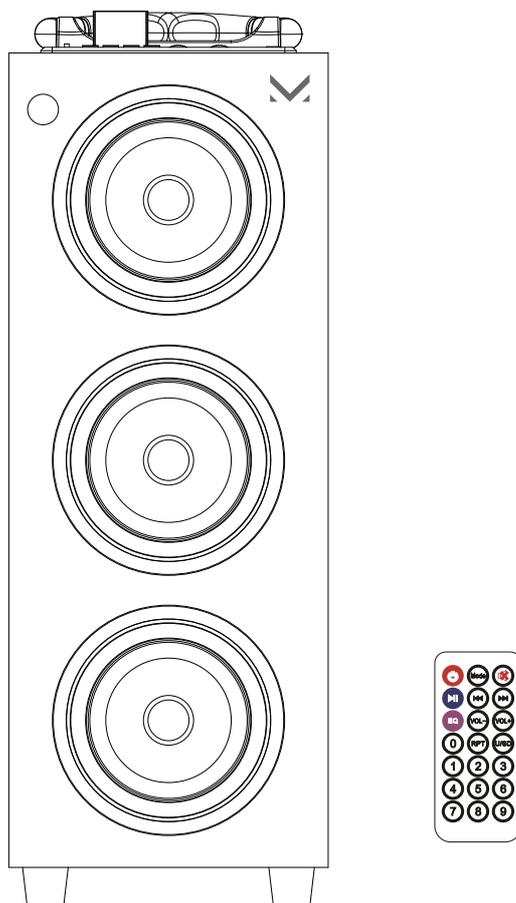

Per scaricare il manuale d'istruzioni inquadra il QR code:

To download the instruction manual frame QR code:

Um die Bedienungsanleitung herunterzuladen, scannen Sie den QR-Code:

Pour télécharger le manuel d'instructions, scannez le code QR:

Para descargar el manual de instrucciones, escanee el código QR:



New Majestic S.P.A. Via Rossi Martini 41, 26013 Crema (CR) - Italia

www.newmajestic.com

MADE IN CHINA

SAFETY WARNINGS

For safe use and maximum performance please read this manual carefully before use.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT DISASSEMBLE THE APPLIANCE. THERE ARE NO USER SERVICEABLE PARTS. FOR REPAIRS CONTACT QUALIFIED TECHNICAL STAFF.

To avoid the danger of electric shock or fire, do not expose to rain or moisture.



DANGEROUS VOLTAGE!



The symbol opposite warns the user of the presence of uninsulated voltage which could cause electric shock.



This symbol warns that before using the unit you must carefully read the instruction booklet.

IMPORTANT NOTES


- The use must be allowed only to adults and responsible persons, adequately educated on the damages deriving from incorrect use.
- This appliance can be used by children aged 8 years and over if they are supervised or if they have received instructions on how to use the appliance safely and understand the dangers involved. Cleaning and maintenance operations by the user must not be carried out by children unless they are over 8 years of age and operate under supervision. Keep the appliance and its cord out of the reach of children under the age of 8.
- The devices can be used by people with reduced physical, sensory or mental abilities or with a lack of experience and knowledge if they are supervised or if they have received instructions regarding the safe use of the device and understand the dangers involved.
- Children must not use the appliance as a game.
- Do not allow the appliance to be used by children or the disabled without supervision.
- Keep away from pets.
- Never use the appliance in places where the cord, plug and the product itself may come into contact with water or wet surfaces. Do not use the appliance outdoors, as rain could create short circuits. Do not touch the appliance with wet hands.
- Avoid installing the unit in the locations listed below:
 - Places exposed to direct sunlight or close to equipment that generate heat, such as radiators;
 - Above other appliances that can radiate excessive heat;
 - Places that block ventilation or are humid or dusty;
 - Environments subject to constant vibration;

- Do not place accessories with naked flames, such as lighted candles, on the appliance.
- Do not try to repair or intervene on the appliance yourself. Incorrect interventions or tampering can void the guarantee. In the event of any damaged parts or suspected malfunction, stop to use it immediately and consult qualified personnel only. Do not throw the appliance in water or other liquids. Do not place objects containing liquids (such as vases) on top of the appliance.
- Do not touch the appliance with wet hands and do not place it near sinks, tubs or containers of liquids. Use the product if in perfect condition only. If the appliance has been immersed in water or is damaged, contact qualified personnel.
- The product should not be used if it has been dropped or if there are any visible signs of damage.
- Exposure to high volume levels can cause hearing problems, including permanent damage. The predisposition to hearing loss varies from person to person, however constant exposure to high volume levels is harmful to anyone. Moderate the volume level.
- Only contact qualified service personnel to avoid voiding the warranty. For information and questions, contact New Majestic SpA technical assistance service.

Package Contents


- | | |
|-----------------------------|---------|
| 1. TS 100BT USB/SD/AX | 1 piece |
| 2. Micro-USB charging cable | 1 piece |
| 3. 3.5mm AUX cable | 1 piece |
| 4. Remote control | 1 piece |
| 5. User Manual | 1 piece |
| 6. Warranty card | 1 piece |

Keys description

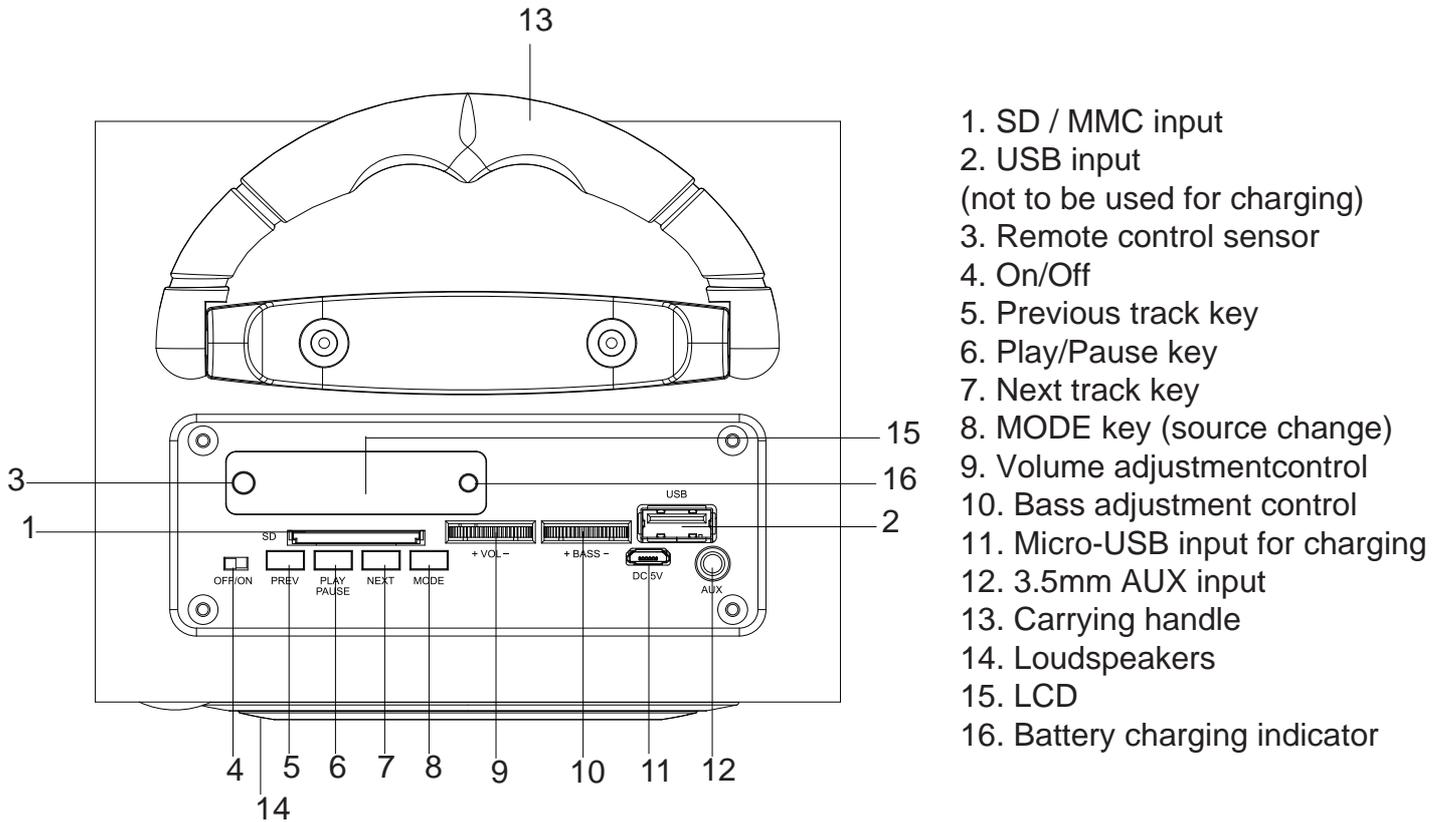

1. SD / MMC input
2. USB input
(not to be used for charging)
3. Remote control sensor
4. On/Off
5. Previous track key
6. Play/Pause key
7. Next track key
8. MODE key (source change)
9. Volume adjustment control
10. Bass adjustment control
11. Micro-USB input for charging
12. 3.5mm AUX input
13. Carrying handle
14. Loudspeakers
15. LCD
16. Battery charging indicator

REMOTE CONTROL

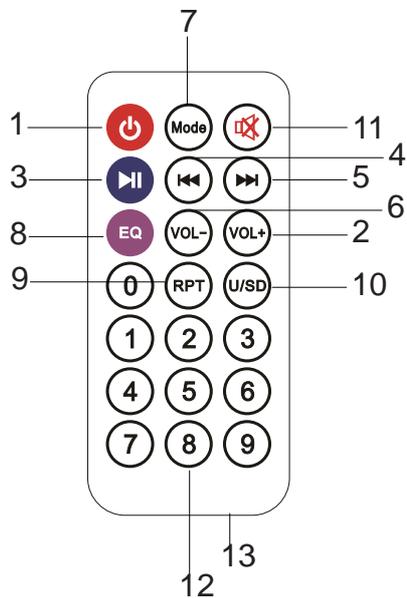

1. Standby key
2. VOL + key
3. Play/Pause key
4. Previous track key
5. Next track key
6. VOL- key
7. MODE key (source change)
8. EQ
9. Songs Repeat key
10. USB/SD key
11. MUTE key
12. Numeric keys
13. Battery

Battery installation and replacement

Remote control works with a CR2025 3V lithium battery (included). To activate the remote control, remove the insulating tab inserted in the battery compartment.

If remote operation becomes intermittent or unsatisfactory, replace the original battery with a new CR2025 3V lithium battery observing the correct polarity.

CHARGING THE BATTERY

The product has a built-in rechargeable battery that can be recharged via the supplied USB cable. Before use, it is recommended to fully charge the battery.

During the charging phase the red LED will be on (the device will be fully charged in about 5 hours). The indicator will turn off when fully charged.

Note:

- Battery life (about 4 hours with listening at medium volume) may vary depending on the listening volume, the type of track being played and the connected external device.
- Charging times may vary depending on the charge status of the product and the features of the power charger

When the battery is low and the device does not turn on, insert the power cable into the Micro-USB input and connect it to a wall socket using a 5V 1A power charger (not supplied) to start charging the battery.

OPERATING INSTRUCTIONS

Power On/Off/Standby

Use the On/Off switch to turn the product on/off.

To put the product into Standby mode, briefly press the Standby button on the remote control and press it again to wake it up.

After approximately 15 minutes of inactivity, Standby mode is automatically activated.

Play/Pause

During music playback, you can press the Play/Pause button to pause the playback.

Pressing the Play/Pause button again will resume playback.

Source change

Press the MODE button repeatedly to switch source between Bluetooth/USB/SD/ AUX IN.

NOTE: Some sources are displayed only if their devices are connected.

Volume adjustment

Turn the volume knob on the device or press the VOL + and VOL- buttons on the remote control to adjust the volume.

Bass adjustment

Turn the bass knob on the device to adjust the bass.

EQ 0	Normal
EQ 1	Pop
EQ 2	Rock
EQ 3	Jazz
EQ 4	Classic
EQ 5	Country

Bluetooth function

The device supports music playback via Bluetooth connection to a smartphone or other compatible Bluetooth device.

NOTE : Compatibility with all Bluetooth devices on the market cannot be guaranteed.

Bluetooth connection:

- Turn on the device, select the Bluetooth source and activate the Bluetooth function on the external device.
- Search for the name “ Beachboy ” from your external device and select it to perform Bluetooth pairing (enter “0000” if required).
- Note: Once the devices have been successfully paired, the Bluetooth pairing will no longer be required and the devices will connect automatically.
- After pairing, you can start playback from the external Bluetooth device.

USB/SD function

Insert a USB/SD key (containing songs in MP3 format) into the appropriate input after turning on the speaker, playback will start automatically.

Press the “Play/Pause”key to pause/resume playback.

Press the “Next Track” or “Previous Track” key to go to the next/previous track.

Using the number keys on the remote control, you can enter the number of the track to be played.

You can press the RPT button on the remote control several times to change the repeat mode (choose ONE to repeat the same track or ALL to repeat all tracks).

Note:

- Compatibility with all USB storage devices on the market cannot be guaranteed.
- External devices that require a rated voltage greater than 5V and a rated current greater than 500mA are not supported.
- If you use a USB extension cable, the connected storage device may not be recognized or may not work properly.
- Use only USB storage devices formatted with the FAT16/FAT32 file system.

AUX function

For playback via AUX input, connect one end of the dedicated cable to the 3.5mm AUX input of the speaker and the other to the external device. Select the correct source by pressing MODE button repeatedly until “AUX” is selected and then start playback directly from the external device.

NOTE: in AUX mode it is not possible to go to the previous/next track with the “Next track” and “Previous track” buttons but it is necessary to carry out the operation directly from the connected external device.

Guide to any problems occurred

Problem	Possible cause	Solution
No sound when the product is turned on.	The selected source is wrong. Volume is too low. Playback paused.	Select the correct source. Increase the volume level. Start playback.
Distorted sound.	Volume is too high.	Reduce the volume level.
No sound after connecting a USB/SD device.	Device is not connected correctly. Unsupported format.	Check that the USB/SD device is connected correctly. Check that the file you want to play is in MP3 format and that the connected device has a FAT16/FAT32 filesystem.
The battery cannot be charged or the battery life is insufficient.	Power cord is not connected properly. The battery has worn out.	Make sure you have plugged in the power cord correctly. Contact a service center for replacement.
The device emits noises/hisses.	There are electronic devices (smartphones, etc.) too close to the speaker.	Move the product away from other electronic devices.

Care and maintenance

- Keep the product away from magnetic objects, water and heat sources.
- To clean the device, use a soft, dry cloth.

Do not use chemicals that could damage it.

ATTENTION: Do not pour water or other liquids on the appliance while cleaning it. Water could get into the crevices and damage the unit.

Technical specifications

Power supply	DC 5V 1A (Micro-USB input)
Built-in battery	Lithium, rechargeable 3.7V 2000 mAh
Output power (RMS)	2 x 3W + 1 x 3W
Frequency response	150Hz - 20KHz
Signal to noise ratio	70dB
Battery life in playback	4 hours with listening at medium volume
Bluetooth version	5.0
Bluetooth distance	About 10m
SD/USB	Supported file systems: FAT16/FAT32 Max capacity: 64 GB
Supported formats SD / USB	mp3
AUX input	3.5mm
Operating temperature	0 ° ~ 40 ° C
Unit size:	14 (L) x 39 (H) x 11 (D) cm
Weight	0,900 kg



WEEE Logo (Waste electrical and electronic equipment)



Battery disposal

INFORMATION TO USERS OF DOMESTIC EQUIPMENTS



Pursuant to Art. 25, Paragraph 1 of the Legislative Act N. 49 14th March 2014, "Implement of the Directives 2011/65 / EU and 2012/19 / EU concerning the reduction of the use of hazardous substances in electrical and electronic equipment, as well as waste disposal".

The crossed bin symbol on the appliance or on its packaging indicates that the product at the end of its useful life must be collected separately from other waste. The user must, therefore, dispose the equipment at the end of its life to the appropriate electronic and electro technical waste centers, or return it to the retailer at the time of purchase of a new type of equivalent equipment, one by one.

Appropriate separate disposal for the subsequent start-up of the disused equipment for recycling, treatment and compatible environmental disposal helps to avoid possible negative effects on the environment and health and favors the re-use and / or recycling of the materials it is composed the equipment.

The illegal disposal of the product by the user involves the application of the penalties referred to in current laws.

Any rechargeable batteries or rechargeable batteries contained in the device must be disposed separately in the appropriate expired batteries bins.

Battery disposal



Disposal of expired batteries must take place at the appropriate recycling centers or according to local authority. Batteries in compliance with the 2013/56 / EC directive.