

MAJESTIC

INSTRUCTION MANUAL

FLAME 22 PRO

**PARTY SPEAKER BLUETOOTH/USB/AUX
WITH BUILT-IN RECHARGEABLE BATTERY**



New MAJESTIC S.p.A.
Via Rossi Martini, 41
26013 Crema (CR) – Italia
www.newmajestic.com
MADE IN CHINA

SAFETY WARNINGS

For safe use and maximum performance, please read this manual carefully before use.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT DISASSEMBLE THE APPLIANCE. THERE ARE NO USER SERVICEABLE PARTS. FOR REPAIRS CONTACT QUALIFIED TECHNICAL STAFF.

To avoid the danger of electric shock or fire, do not expose to rain or moisture. Read all safety instructions before use.



DANGEROUS VOLTAGE!

The symbol to the side warns the user of the presence of voltage that could not be isolated and may cause electric shock.



This symbol warns the user that before using the unit, it is necessary to carefully read the instruction booklet.

IMPORTANT NOTES

- The use must be allowed only to adults and responsible persons, adequately educated on the damages deriving from incorrect use.
- This appliance can be used by children aged 8 and over if they are under supervision or if they have received instructions regarding the safe use of the appliance and if they understand the dangers involved. Cleaning and maintenance operations by the user must not be carried out by children unless they are over 8 years of age and operate under supervision. Keep the appliance and its cord out of the reach of children under the age of 8.
- The devices can be used by people with reduced physical, sensory or mental abilities or with a lack of experience and knowledge if they are supervised or if they have received instructions regarding the safe use of the appliance and understand the dangers involved.
- Children must not use the appliance as a game.
- Do not allow the appliance to be used by children or the disabled without supervision
- Keep away from pets
- Never use the appliance in places where the cord, plug and the product itself may come into contact with water or wet surfaces. Do not use the appliance outdoors, as rain could create short circuits. Do not touch the appliance with wet hands.
- Avoid installing the unit in the locations listed below:
 - Places exposed to direct sunlight or close to equipment that generate heat, such as radiators;
 - Above other stereo equipment that may radiate excessive heat;
 - Places that block ventilation or are humid or dusty;
 - Environments subject to constant vibration;
- Do not place accessories with naked flames, such as lighted candles, on the appliance.
- Do not try to repair or intervene on the appliance yourself. Incorrect interventions or tampering can void the guarantee. In the event of any damaged parts or suspected malfunction, discontinue use immediately and consult qualified personnel. Never immerse the appliance in water or other liquids. Do not place vessels containing liquids (such as vases) on top of the appliance.
- Do not touch the appliance with wet hands and do not place it near sinks, tubs or containers of liquids. Use the product only if it is in perfect condition. If the appliance has been immersed in water or is damaged, contact qualified personnel. Do not try to repair the appliance yourself. Any tampering or incorrect repairs void the warranty.
- The product should not be used if it has been dropped or if there are any visible signs of damage.
- Exposure to high volume levels can cause hearing problems, including permanent damage. The predisposition to hearing loss varies from person to person, however constant exposure to high volume levels is harmful to anyone. Moderate the volume level.

PACKAGE CONTENTS:

- Speaker
- USB Type C Charging Cable
- 3.5mm AUX IN audio cable
- Instruction manual and Warranty

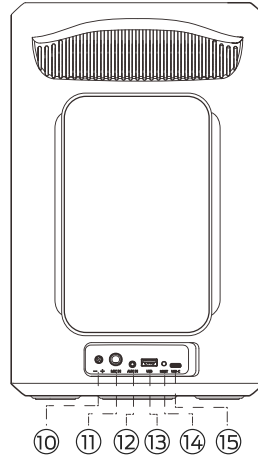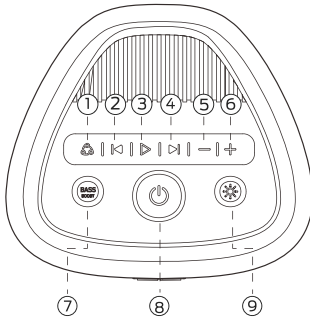

Description of the keys

1. Bluetooth pairing
2. Previous track
3. Play/Pause button
4. Next track key
5. Volume –
6. Volume +
7. Bass boost function
8. Power On/Off/Audio Input Select/LED Indicator
9. LED lights
10. ECO Microphone adjustment screw
11. Mic Input (6.35mm)
12. AUX input
13. USB input
14. Reset key
15. USB-C charging socket

Turn on / turn off / recharge the battery

For proper operation, re charge fully speaker before use .

Connect the supplied USB cable to a USB power adapter of at least 5V/2A or top (**ADAPTER NOT INCLUDED**).

While charging the battery the button (8) will light up in red.

Once charging is complete, the light red turns off.

Power on/off

To turn on the speaker, press and hold the button (8) for 2 seconds.

To turn off the loudspeaker, press and hold the button (8) for 2 seconds.

- If the speaker is not paired with any Bluetooth device it will automatically turn off after 15 minutes to save battery power.

Bluetooth pairing

When you turn on the speaker for the first time, it will enter pairing mode automatically. Start the pairing procedure from your Bluetooth device, selecting the name "FLAME 22 PRO".

To pair with "a new device", keep the key (1) pressed until you hear "DISCOVERING". At this point the speaker will remove the previous pairing and will become available again with a new Bluetooth device.

When the speaker is successfully paired you will hear a sound confirming the connection and the speaker LED indicator will stop flashing.

Volume control

Short press the volume + / – key to turn the volume up or down.

Music mode

Play/Pause: Press the PLAY/PAUSE button to play or pause the music.

Next track: press “ ►► ” button

Previous track: press “ ◀◀ ” button

AUX mode

Use the AUX cable (included) to connect the speaker to any computer or device with a 3.5mm audio output. The speaker will automatically switch to AUX mode when a device is connected. Press the button (8) to change the playback source.

USB input

Insert a USB stick (**NOT INCLUDED**) with MP3 files to play music via the USB input. The speaker will automatically switch to USB mode. Press the button (8) to change the playback source.

Source selection / playback mode

The bluetooth mode is set by default, the other audio playback sources can be selected by pressing the key (8) in sequence:

Bluetooth → USB → AUX.

Microphone (dynamic -52dB +/- 3dB)

Insert a microphone (**NOT INCLUDED**) with the 6.35mm plug into the microphone input.

Microphone ECO adjustment

Use a star screwdriver (**NOT INCLUDED**) and rotate the screw (10) to adjust the ECO effect of the microphone.

LED lights mode

When the speaker is on, press the button (9) to switch between the different light effects. If you want to deactivate the LED light mode, press and hold the button (9) for 2 seconds.

Bass boost mode

Press the button (7) to activate/deactivate the Bass Boost function .

TWS function (True Wireless Stereo)

NOTE: TWS function requires two FLAME 22 PRO party speakers.

1. Turn on the two speakers without any active Bluetooth pairing. If you have previously paired, delete it from the previously paired device, then press the RESET button on both speakers.
 2. Turn on only the speaker that will be used as "master", then pair your Bluetooth device (e.g. a smartphone).
 3. After pairing, press the button (1) once to temporarily disconnect the newly paired device.
 4. Turn on the second speaker, which will be used as a "slave", you will hear "DISCOVERING". At this point, press the button (1) twice on the "master" speaker, you will hear "DISCOVERING" followed by a pairing sound and the light on the "slave" speaker will stop flashing, remaining on steadily.
This confirms that the TWS connection was successful.
 5. After connecting the "master" speaker to the "slave" one, press the button (1) once on the "master" speaker to re-establish the pairing with the previously paired Bluetooth device (e.g. a smartphone).
- Now both speakers will play the same music in TWS (True Wireless Stereo) mode.

Reset

In the event of any malfunction, press the key (14) to reset the loudspeaker.

LED indicator and voice tones

State	Description	Tone
Power on	the white LED stays on	Start-up tone
Shutdown	The white LED goes out	Goodbye
Coupling	The white LED flashes quickly	Discovering
Bluetooth connection	The white LED stays on	Your device is connected
USB mode	The white LED stays on	-
AUX mode	The white LED stays on	-
Low battery		Battery low
Reload	Red LED when charging, turns off when fully charged	-

Guide to solving possible problems

Defect	Possible cause	Solution
No sound when the product is turned on.	The selected source is wrong. Volume too low. Playback paused.	Select the correct source. Increase the volume level. Start playback.
Distorted sound.	Volume too high.	Decrease the volume level.
No sound from microphone.	Microphone not connected properly. Low microphone volume.	Connect the microphone correctly. Increase the microphone volume level.
No sound after connecting a USB device.	Device not connected properly. Unsupported format.	Check if the USB device is connected correctly. Check that the file you want to play is in MP3 format and that the connected device has a FAT16/FAT32 file system.
The battery cannot be charged or its life is insufficient.	Power cord not connected properly. The battery has worn out.	Make sure you plugged in the power cord correctly. Contact a service center for replacement.
The device makes noises/rustles.	The switched on microphone is too close to the speaker. There are electronic devices (smartphones, etc.) too close to the speaker.	Move the microphone away from the speaker and adjust the volume. Move the speaker away from other electronic devices.

Care and maintenance

Keep the product away from magnetic objects, water and heat sources.

To clean the appliance, use a soft , dry cloth. Do not use chemicals that could damage it.

ATTENTION: Do not pour water or other liquids on the appliance while cleaning it. Water could enter the cracks and damage the speaker.

Technical specifications

Power supply via USB type C socket

Internal 7.4V lithium battery (4000 mAh)

RMS output power 30W

MAX output power 300W (PMPO)

Frequency response 50-20KHz

Signal to noise ratio \geq 80dB

Battery life in playback up to 5 hours at medium volume

Bluetooth version 5.3

Bluetooth distance max 9 meters outdoors without obstacles

USB input for reading data sticks

Support playing MP3 files via USB stick

6.35mm (1/4") Mic Input

3.5mm AUX IN input

Operating temperature from 5° to 35°C

Dimensions 21,19(L) x 19,06(D) x 33,3(H) cm

Weight 2.8kg




WEEE Logo(Waste electrical and electronic equipment)/Logo
RAEE(Rifiuti di apparecchiature elettriche ed elettroniche)


Battery logo/Logo batteria(indica che il prodotto include una batteria)

INFORMATION TO USERS OF DOMESTIC EQUIPMENTS



Pursuant to Art. 25, Paragraph 1 of the Legislative Act N. 49 14th March 2014, "Implement of the Directives 2011/65 / EU and 2012/19 / EU concerning the reduction of the use of hazardous substances in electrical and electronic equipment, as well as waste disposal".

The crossed bin symbol on the appliance or on its packaging indicates that the product at the end of its useful life must be collected separately from other waste. The user must, therefore, dispose the equipment at the end of its life to the appropriate electronic and electro technical waste centers, or return it to the retailer at the time of purchase of a new type of equivalent equipment, one by one.

Appropriate separate disposal for the subsequent start-up of the disused equipment for recycling, treatment and compatible environmental disposal helps to avoid possible negative effects on the environment and health and favors the re-use and / or recycling of the materials it is composed the equipment.

The illegal disposal of the product by the user involves the application of the penalties referred to in current laws.

Any rechargeable batteries or rechargeable batteries contained in the device must be disposed separately in the appropriate expired batteries bins.

Battery disposal



Disposal of expired batteries must take place at the appropriate recycling centers or according to local authority. Batteries in compliance with the 2013/56/EC directive.