



TAB 916 4G
Tablet PC
Android™ 12
Instruction Manual

New Majestic S.p.A.

Via Rossi Martini, 41

26013 Crema (CR) – Italy

www.newmajestic.com

MADE IN CHINA



Table of Contents

- **Specifications**
- **What's inside the box**
- **Tablet Parts**
- **SIM Card and Micro SD installation**
- **Getting started**
 - Charging battery
 - Power On/Off
 - Screen lock
 - Home screen
 - Browsing keys
 - Set up menu
 - Telephone functions
- **How to use TF card**
 - How to take the TF card out
- **Software keyboard**
- **Touch screen**
- **How to connect to PC**
- **Internet connection**
 - Wireless
 - Web browsing
- **Camera**
- **Trouble Shooting**

- Force quit an application
- Power Off
- Restore default setting
- Warnings

Specifications

Display: 10.1" IPS HD(1280x800) Capacitive multi-touch screen

A55 Octa Core SC9863A (4x1.6Ghz + 4x1.2Ghz) RAM: 3GB DDRIII

GPU Graphics IMG GE 8322@500Mhz

32GB built-in memory*

Expandable memory via Micro SD card max 64GB (NOT included)

Wi-Fi Internet connection (b/g/n)

4G SIM module (up to 150Mbs download and up to 50Mbs upload)

4G frequencies (FDD/LTE) 800/1800/2100/2600Mhz

3G frequencies (WCDMA) 900/2100Mhz

GSM frequencies (GPRS/EDGE) 850/900/1800 / 1900Mhz

Built-in Bluetooth (version 4.2 LE)

Built-in GPS (GPS + AGPS)

**2.0 Mpixels front camera and 5.0 Mpixels rear camera
with Flash LED**

Built-in microphone

Built-in speaker

Type-C USB input (USB cable included)

DC 5V - 2A Power adaptor

Android™ 12 Operating System

*** NOTE:** built-in memory is divided in two partitions, system partition (hidden) and user partition (visible). In the hidden partition is included the software necessary to recovery the operative system and the installed applications, while in the visible partition you can find the user data.

What's Inside The box

Tablet – 1pc

 
Power adaptor – 1pc

USB Cable-1pc

Instruction manual - 1pc

Warranty card - 1pc

Tablet Parts (pls delete the line which shows 2 speakers)


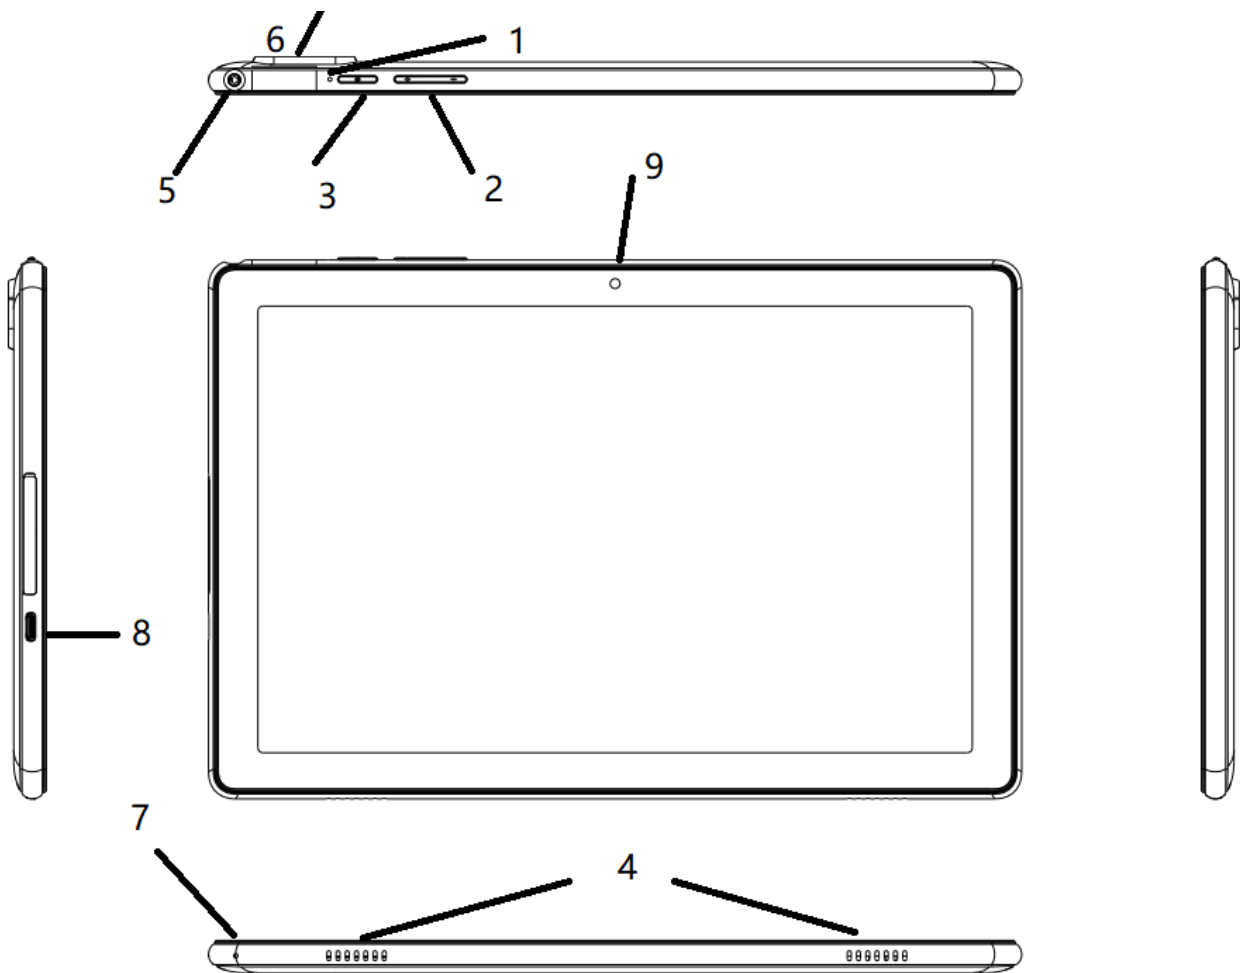


1 Reset	Reset the system in case of device stuck and restart
2 Volume +/-	Press to increase/decrease the volume
3 Power	Keep pressed to turn on/off the tablet; shortly press to activate standby
4 Speaker	Built-in speaker
5 Earphone jack	Connect earphone to this standard 3.5mm jack (earphone not included)
6 Rear camera	2 Mpixels camera
7 Microphone	
8 Type-c USB	For charging / for PC connection
9 Front camera	

SIM card and Micro SD card installation


Turn off the tablet and disconnect any external power sources.

  Insert the SIM card and the micro SD card in the appropriate slot, as shown on below picture

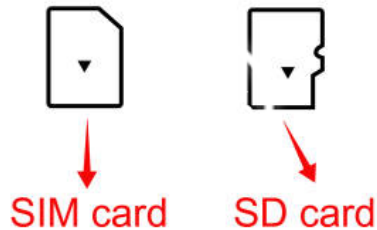

Getting Started

 Battery Charging

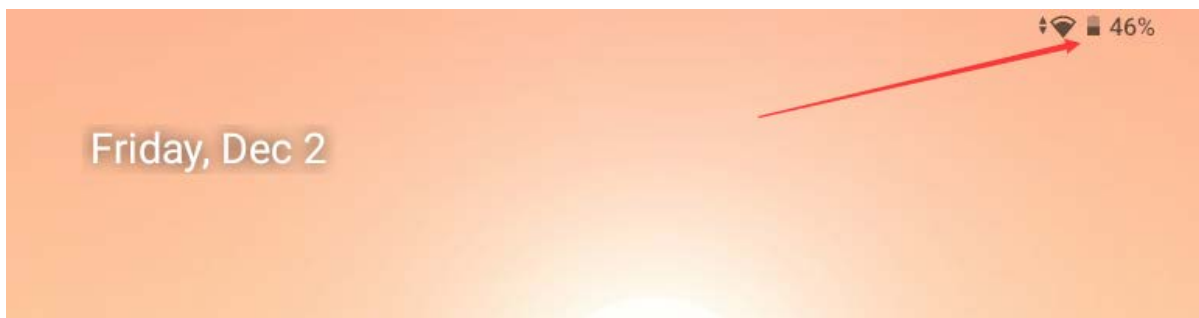

The tablet has a built-in rechargeable Li-polymer battery.

* To charge connect the AC power adapter to the micro USB jack on the top side of the tablet.

* The battery icon shows the battery status and charging status.

*The tablet can be used even if the battery is being charged.

*Do not replace battery without authorization, or the explosion hazard might happen.


*Recharge it for at least half hour if it has been idle for long time and fails to start itself.

*Regularly recharge it at least one time per month


*35°—5° is the optimum temperature for the battery recharging or the battery performance might deteriorate slightly

Power ON/OFF

ON:

Press the  button for 3 seconds until the tablet turns “ON”.

OFF:

1. Press the  button for 2 seconds and it will appear
Select POWER OFF to turn off the tablet

 
Screen Lock


This feature locks the screen, at the same time turn OFF the screen’s backlight after a few seconds.

Screen locks when:

1. System is idle.
2. Manually activated by pressing the Power button once.

Screen unlock :

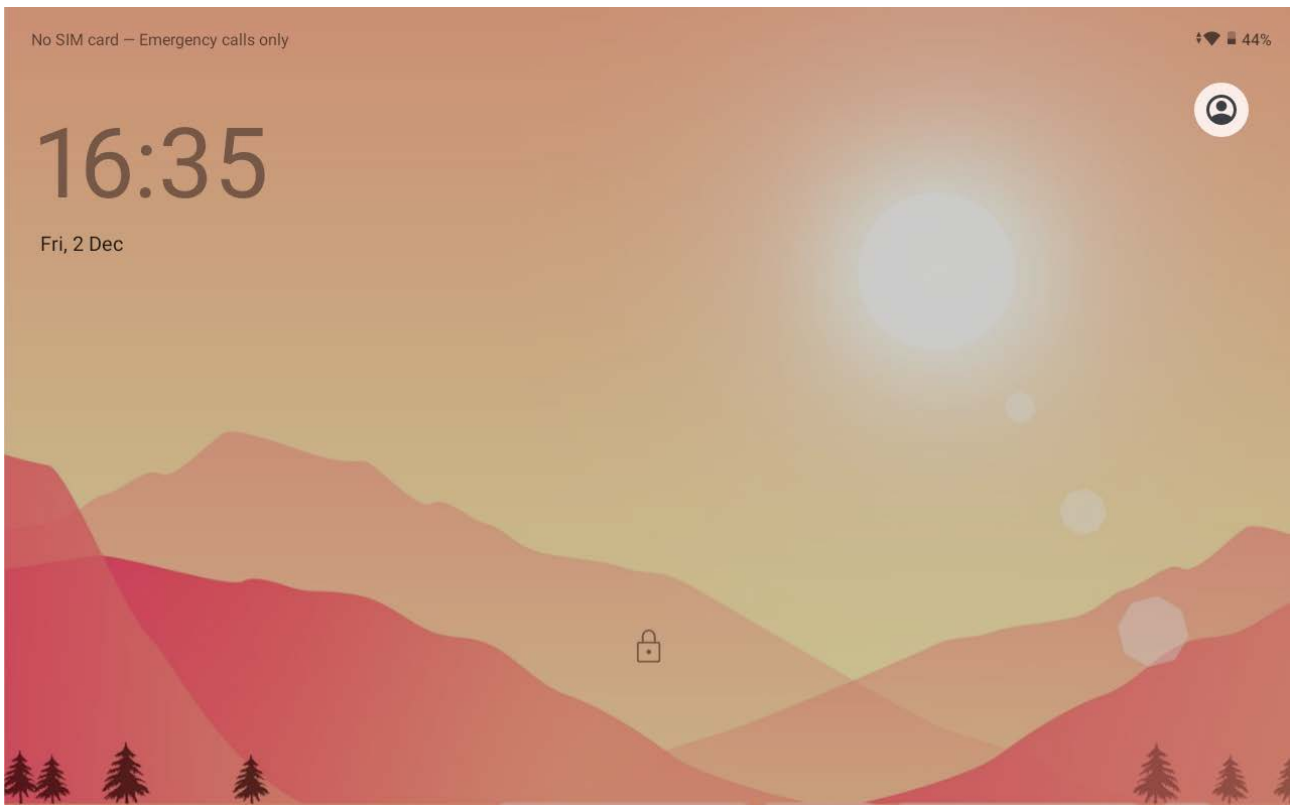


To unlock the screen, press the  button and drag the displayed padlock upwards.

Home screen


The Home screen will look similar to the picture below. To switch between screens, simply slide your finger left or right across the display.

 The status bar and navigation buttons are always visible, no matter which Home screen you can currently viewing.

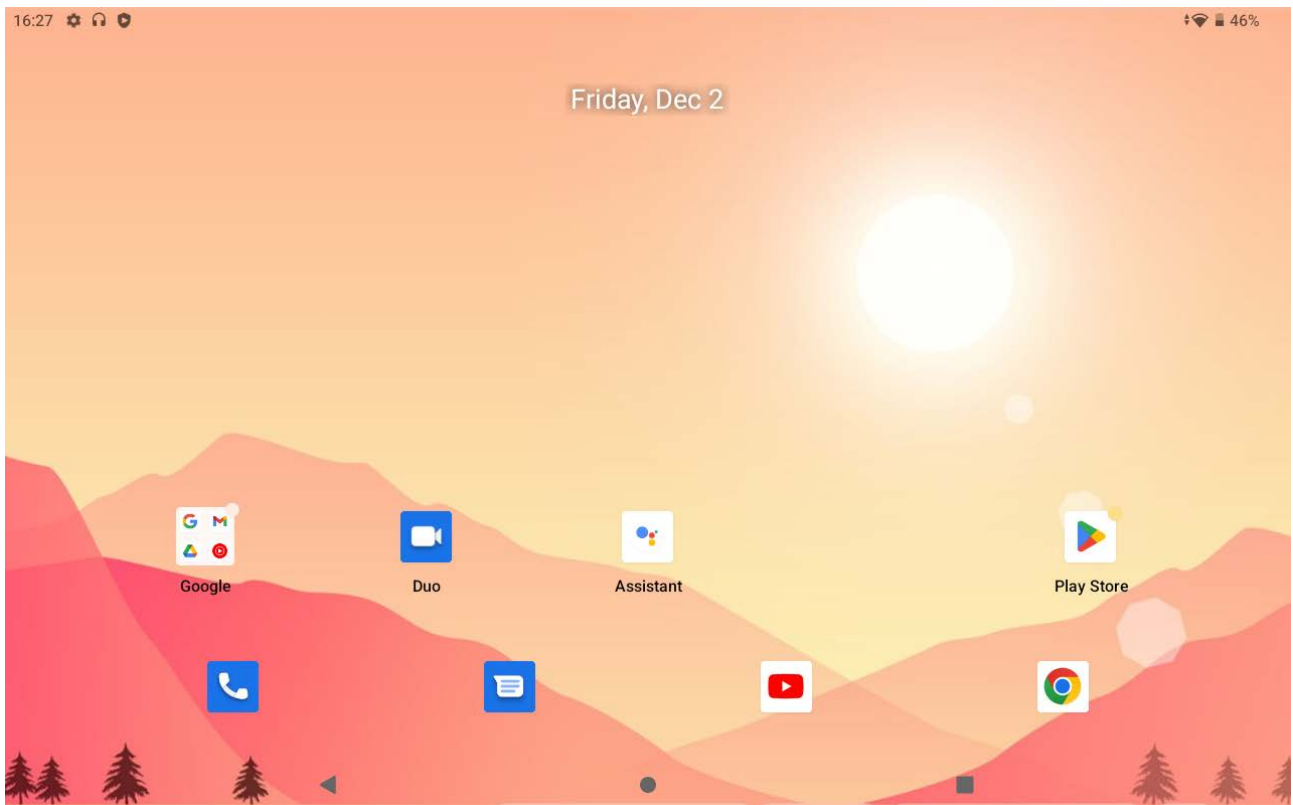


The desktop contains links to the most used applications. Touch the Google bar in the center of the screen to search the web.

 
Slide your finger from the bottom edge of the screen upwards will launch the applications menu.

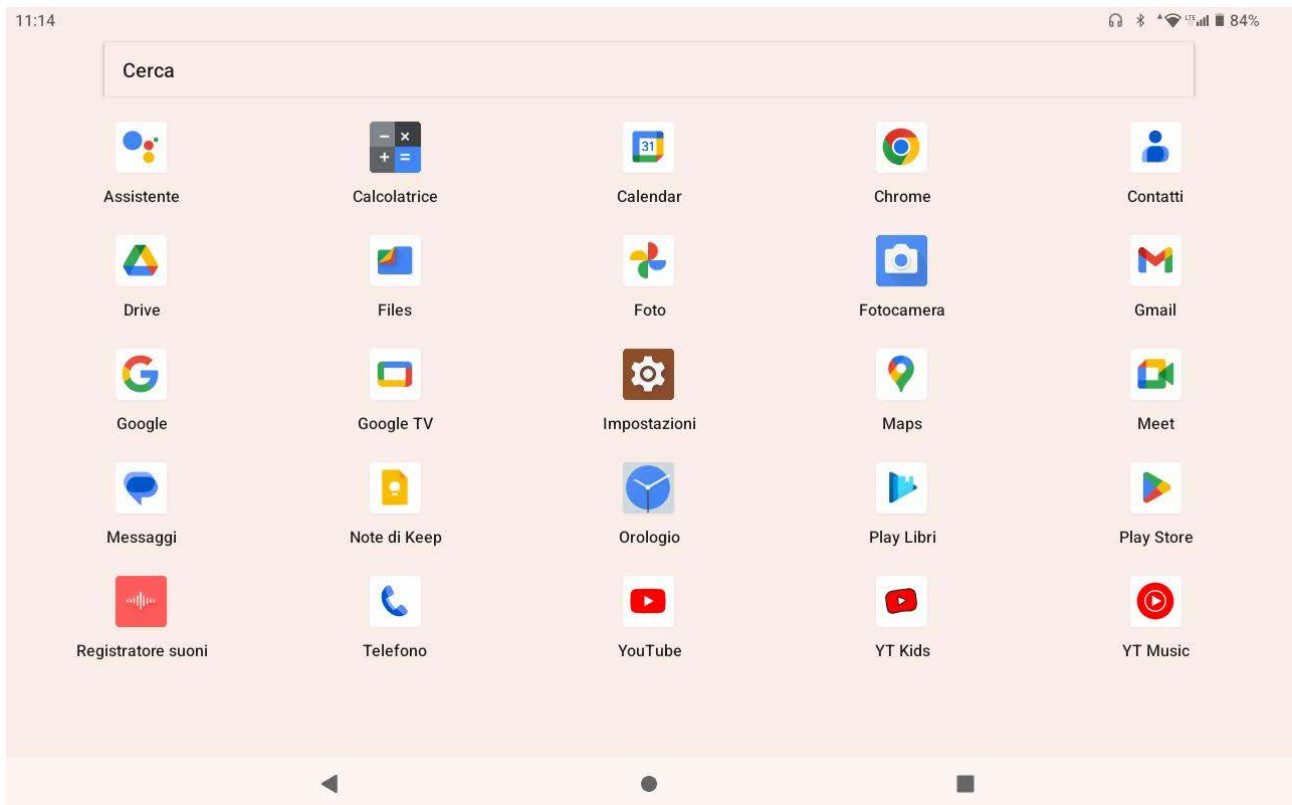

 The status bar displays system information, such as current time, 4G/3G/WiFi connectivity and battery status.

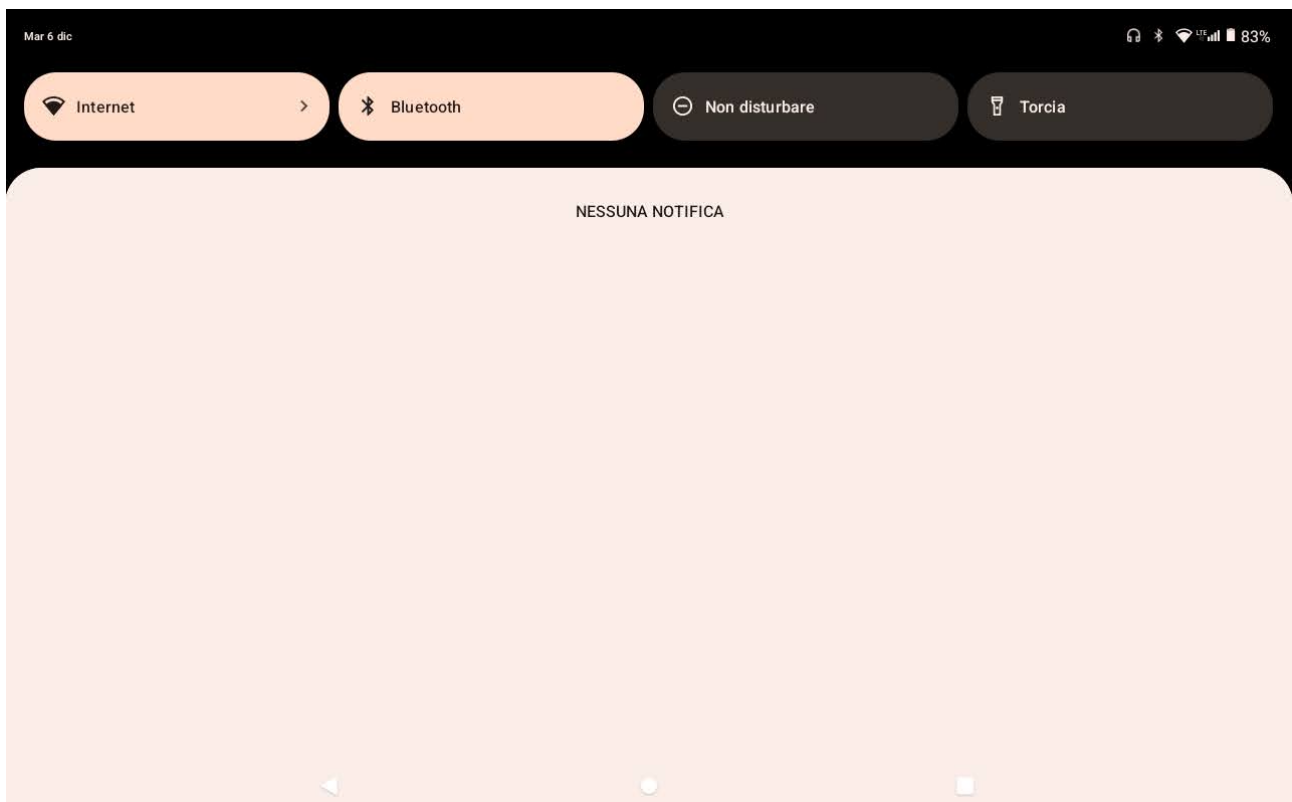

 Drag your finger from the top edge of the screen inwards to view the notification menu. Drag the notification menu down again to display a second quick access menu. Through this menu it is possible to change functions such as screen brightness, automatic rotation, activate and deactivate radio connections, manage geolocation and the do not disturb function.

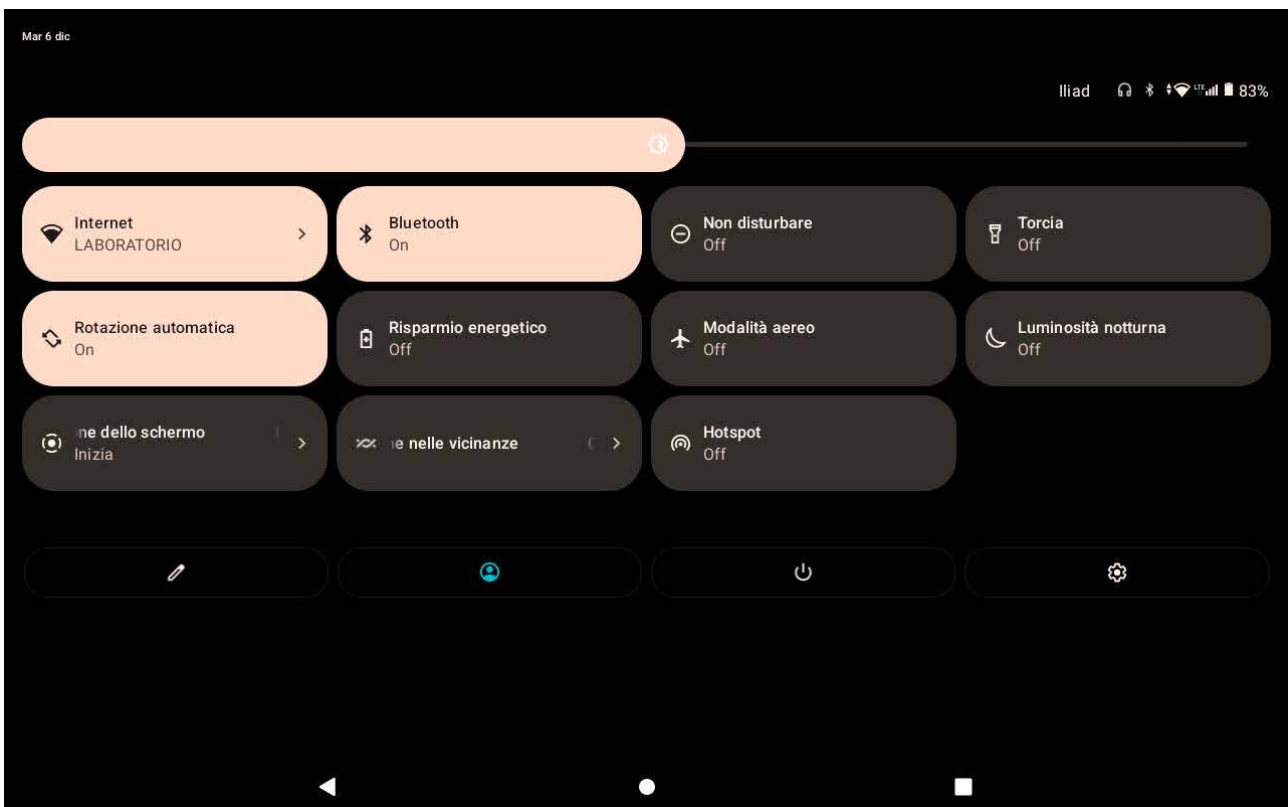

NAVIGATION BUTTONS

◀ The button moves back one step to the previous menu/page.

○ The button returns immediately to the main screen.

- The button display a menu of recently opened applications. Tap an app to recall it or scroll up to close it.

Settings Menu

The settings menu allows you to adjust Tablet system configuration. To change settings:

- Touch the "Settings" menu icon on the Application menu. The Settings menu will open.
- Touch a category title to view further options on the right side of the screen.

Network and Internet: connect / disconnect from wireless networks, shows 4G/3G connection status; hotspot function

Connected devices: settings for the Bluetooth connection and management of currently connected devices;

Apps: management of applications

Notifications: management of notifications;

Battery: see battery status and operating time;

Storage space: built-in memory and Micro SD management, available capacity, etc ...;

Scheduled on/off: settings related to scheduled on/off.

Background and style: settings on the background and graphic style;

Audio: change audio profiles and do not disturb mode;

Accessibility: Talkback activation, set font size, automatic screen rotation, etc ..;

Security : change type of screen lock, encryption, password, credential storage, SIM lock settings, security / system update management, etc...

Privacy : Manage permissions , passwords , lock screen, autofill, location history and Google activity management

Geolocation : apps authorized for location, location requests made, etc ...

Security and emergency: personal settings to use in case of emergency;

Password and account: management of the accounts associated with the device;

Digital well-being and Parental Control: manage the time of use of the app and Parental Control;

Google: menu dedicated to all Google account settings;

System: language selection and input, spell check, date and time, keyboard settings, data backup, factory data reset, etc ...;


Information: information on the Android device.

 
Telephone function

With the tablet off, insert the SIM card in the appropriate slot (see "SIM and microSD card installation").

After inserting the SIM card, turn on the tablet and wait for the telephone signal to appear.

Once connected to the telephone operator, open the

telephone application , dial the number you want to call and start the call by touching the handset.

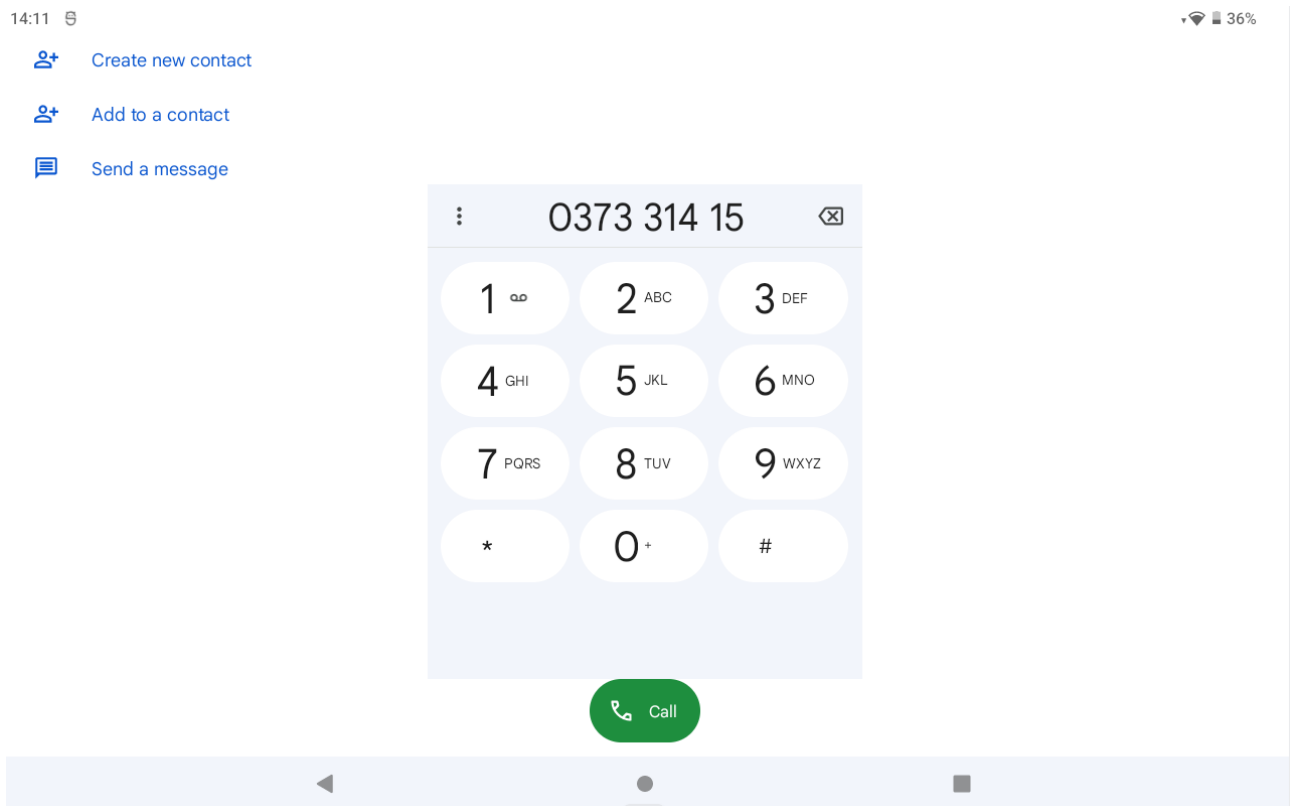

How to use the TF card:

With the tablet off, insert the micro SD card in the appropriate slot (see "Installing the micro SD card"). Gently push the card into the slot until it clicks into place.

A notification will appear on the screen: "New SD card detected".

Press "Configure" and follow the guided procedure to use the micro SD card.

**WARNING: DURING THE MICRO SD CARD CONFIGURATION ALL THE DATA ON THE MEMORY CARD WILL BE CANCELLED !
MAKE A DATA BACKUP BEFORE CONFIGURATION.**

 
Removing TF card

NOTE: IF THE CARD IS CONFIGURED FOR THE "USE AS AN INTERNAL MEMORY" IT WILL NO LONGER BE POSSIBLE TO USE IT WITH OTHER DEVICES! THE REMOVAL OF THE CARD FROM THE DEVICE INVOLVES THE LOSS OF PERSONAL DATA AND APPS, THEREFORE YOU ARE RECOMMENDED TO MAKE A BACKUP OF THE DATA VIA COMPUTER (CONNECTING THE USB CABLE).

If the micro SD card is used as a "portable memory", access the "Settings / Storage space" panel, then touch the "eject" symbol on the micro SD card. At this point the card will have been deactivated and can be safely removed.

Software Keyboard

The tablet has a software keyboard which automatically show up when you tap the place on screen where text or number are to be entered.

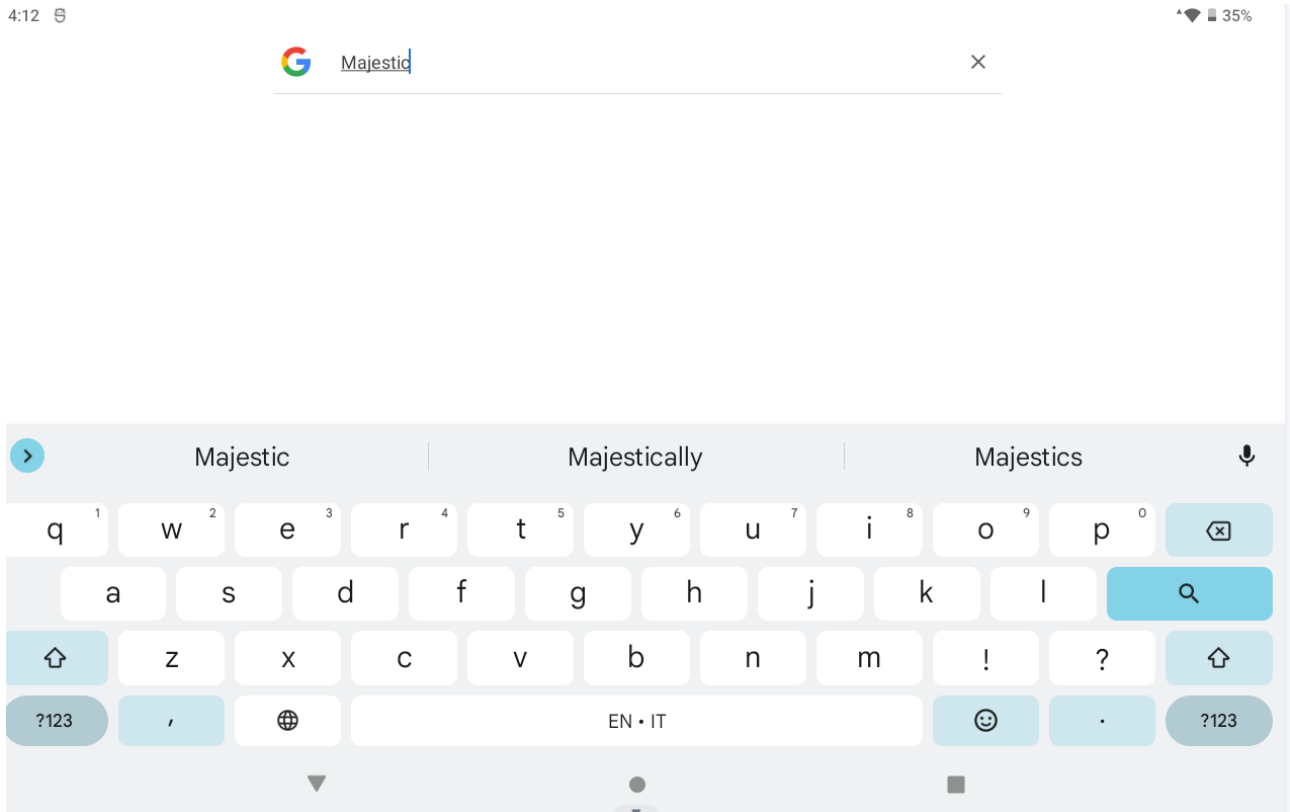

Touch Screen

The touch screen responds to finger touch.

Note: don't place any object on the touch screen for it may damage or crush the screen.

Single Click: single click one icon to choose the icon or option you want.

Long Press: press and hold one icon to make appear a menu related to the executed function (if available).

Drag: press the icon and drag it to a different screen.

How to connect with computer

Note: Turn on your Tablet before connect the Tablet to PC by USB cable.

Use the USB cable to connect the tablet to the computer. The system will warn you that it is connected via USB (by touching the dedicated notification you can change the use of the USB connection to charge the device / transfer files / etc ...). The tablet is preset in MTP (Media Transfer Protocol)

mode suitable for compatible Windows systems.

If the USB connection is successful you should see your Android device in your computer's resources.

Internet Connection

Wi-Fi:

1 Select “ Settings”

2 Select “Network and Internet Wi-Fi” and slide OFF to ON status.

3 All detected wireless networks in the area will be listed,
Click to select desired wireless connection.

4 Enter network key if necessary.

 
5 Once connected to a wireless network, settings will be saved

6 Wireless icon will appear on the taskbar when connected successfully.

Note: when the tablet detects the same wireless network in the future, the device will connect to the network automatically with same password record.

Web Browsing

Connect to the internet and launch the browser.(Chrome), chose the site and confirm the choice.

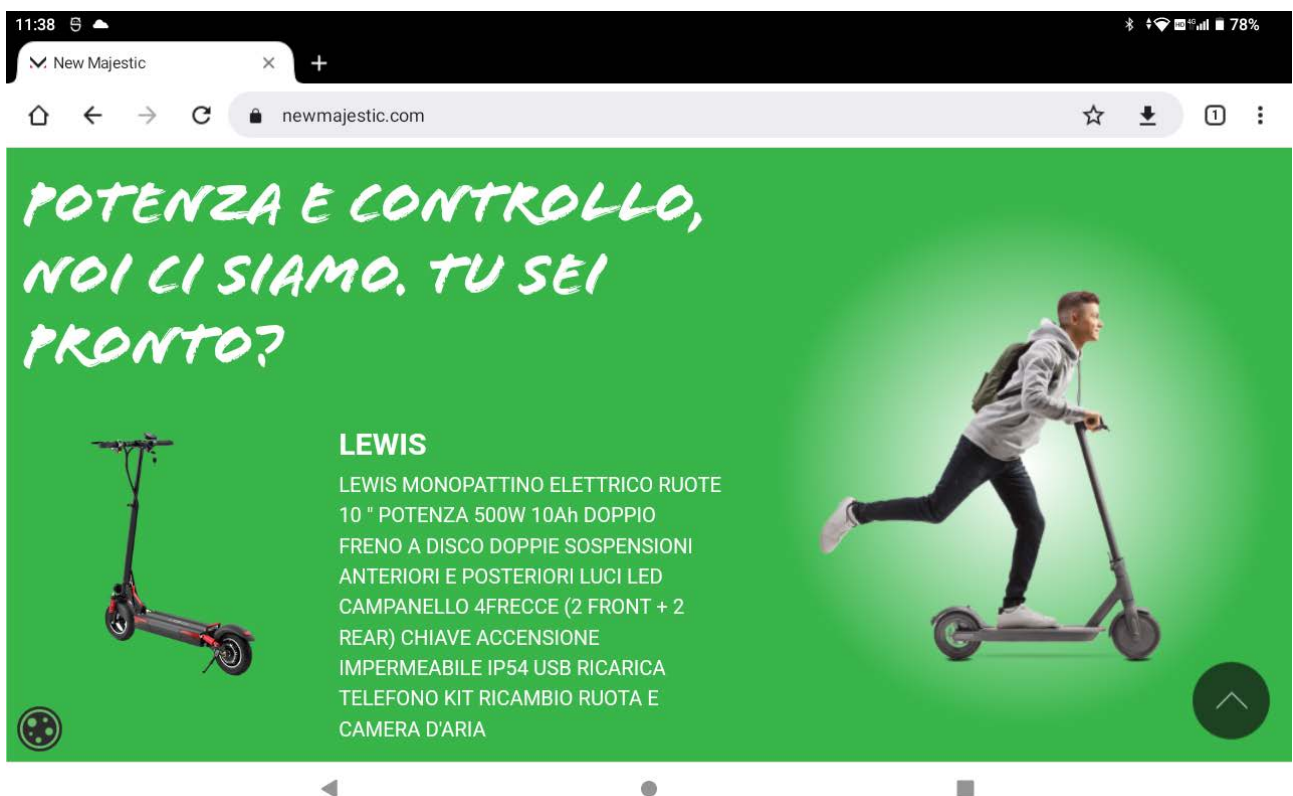



Camera

Touch the icon  to enter camera mode

Touch the icon  to take photo

 Touch the icon  to start camera recording. Press again to stop it.

 Touch the icon  to switch between the rear camera and the front camera or vice versa.

Touch the icon  to manage the flash operation (automatic / always on / off).

 
Touch the icon created from the last image taken to view it or share it.

Touch the button  to return to the camera.

Trouble Shooting

Close Application

When an application is not responding you can close it and will make system response faster.

To close the applications  press to display idle apps and scroll towards right or left to close the app.

Mandatory Power off

Press the **Reset** button close to **Power** button and the device will be forced to be powered off

Restore Default Setting

If you want to reset the factory setting and erase all materials, please press : Settings → System → Reset options → Clear all data (factory data reset).

Warning: Factory data reset setting will delete your data and configuration of system and applications from downloading.

** Please use this function carefully.

Frequency band	Highest 10gSAR(W/kg) BODY(5mm)	SAR Test Limit (W/Kg)
GSM900	0.353	2.0
GSM1800	0.278	2.0
WCDMA Band 1	0.361	2.0
WCDMA Band 8	0.294	2.0
LTE Band 1	0.308	2.0
LTE Band 3	0.345	2.0
LTE Band 7	0.354	2.0
LTE Band 20	0.415	2.0
WIFI 2.4G	0.266	2.0
Simultaneous Reported SAR	0.636	2.0

WARNINGS

- Do not update the operating system if it is not released by the manufacturer, this will void the warranty.
- The guide to applications use, if available, will be directly inserted in the application by the developers. New Majestic S.p.A. doesn't take charge of possible errors found in the online guides.
- All brands and copyright are property of the related owners.
- New Majestic Spa is not responsible for problems that third-party software may cause to the device.
- New Majestic Spa is not responsible for problems of any incompatibilities found when using software developed by third parties.
- New Majestic Spa declines all responsibility for the infringement of copyright laws by the user.

Safety instructions


For safe use and maximum performance, please read this manual carefully before use.


CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT DISASSEMBLE THE APPLIANCE. THERE ARE NO USER SERVICEABLE PARTS. FOR REPAIRS CONTACT QUALIFIED TECHNICAL STAFF.

To avoid the danger of electric shock or fire, do not expose to rain or moisture. Read all safety instructions before use.



DANGEROUS VOLTAGE!

 The symbol to the side warns the user of the presence of voltage that could not be isolated and may cause electric shock.

 This symbol warns the user that before using the unit, it is necessary to carefully read the instruction booklet.

IMPORTANT NOTES

- The use must be allowed only to adults and responsible persons, adequately educated on the damages deriving from incorrect use.
- This appliance can be used by children aged 8 and over if they are under supervision or if they have received instructions regarding the safe use of the appliance and if they understand the dangers.

involved. Cleaning and maintenance operations by the user must not be carried out by children unless they are over 8 years of age and operate under supervision. Keep the appliance and its cord out of the reach of children under the age of 8.

- The devices can be used by people with reduced physical, sensory or mental abilities or with a lack of experience and knowledge if they are supervised or if they have received instructions regarding the safe use of the appliance and understand the dangers involved.
- Children must not use the appliance as a game.
- Do not allow the appliance to be used by children or the disabled without supervision

- Keep away from pets
- Never use the appliance in places where the cord, plug and the product itself may come into contact with water or wet surfaces. Do not use the appliance outdoors, as rain could create short circuits. Do not touch the appliance with wet hands.
- Avoid installing the unit in the locations listed below:
 - Places exposed to direct sunlight or close to equipment that generate heat, such as radiators;
 - Above other stereo equipment that may radiate excessive heat;
 - Places that block ventilation or are humid or dusty;
 - Environments subject to constant vibration;
- Do not place accessories with naked flames, such as lighted candles, on the appliance.
- Do not try to repair or intervene on the appliance yourself. Incorrect interventions or tampering can void the guarantee. In the event of any damaged parts or suspected malfunction, discontinue use immediately and consult qualified personnel. Never immerse the appliance in water or other liquids. Do not place vessels containing liquids (such as vases) on top of the appliance.
- Do not touch the appliance with wet hands and do not place it near sinks, tubs or containers of liquids.
- Use the product only if it is in perfect condition. If the appliance has been immersed in water or is damaged, contact qualified


personnel. Do not try to repair the appliance yourself. Any tampering or incorrect repairs void the warranty.

- The product should not be used if it has been dropped or if there are any visible signs of damage.
- Exposure to high volume levels can cause hearing problems, including permanent damage. The predisposition to hearing loss varies from person to person, however constant exposure to high volume levels is harmful to anyone. Moderate the volume level.

MAJESTIC

MODEL:K-T100502000E

INPUT:100-240V~50-60Hz

 
 
0.35A Max 

OUTPUT: 5 V==2000mA

New Majestic SpA.

Via Rossi Martini, 41

26013 CREMA (CR)ITALY

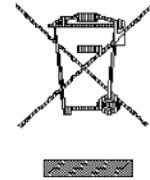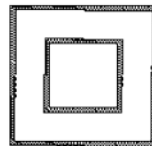

Dongguan Bestdg Smark Technology Co.,Ltd



TAB 916 4G



MADE IN CHINA

INFORMATION TO USERS OF DOMESTIC EQUIPMENTS



Pursuant to Art. 25, Paragraph 1 of the Legislative Act N. 49 14th March 2014, "Implement of the Directives 2011/65 / EU and 2012/19 / EU concerning the reduction of the use of hazardous substances in electrical and electronic equipment, as well as waste disposal".

The crossed bin symbol on the appliance or on its packaging indicates that the product at the end of its useful life must be collected separately from other waste. The user must, therefore, dispose the equipment at the end of its life to the appropriate electronic and electro technical waste centers, or return it to the retailer at the time of purchase of a new type of equivalent equipment, one by one.

Appropriate separate disposal for the subsequent start-up of the disused equipment for recycling, treatment and compatible environmental disposal helps to avoid possible negative effects on the environment and health and favors the re-use and / or recycling of the materials it is composed the equipment.

The illegal disposal of the product by the user involves the application of the penalties referred to in current laws.

Any rechargeable batteries or rechargeable batteries contained in the device must be disposed separately in the appropriate expired batteries bins.

Battery disposal



Disposal of expired batteries must take place at the appropriate recycling centers or according to local authority. Batteries in compliance with the 2013/56/EU directive.