

MAJESTIC

RS 138WI

FM alarm clock radio with dual alarm and RGB light ring with 5 ambient light effect
USB charging port and wireless charging base for smartphones



Instruction manual

New MAJESTIC SpA
Via Rossi Martini, 41
26013 Crema (CR) – Italy
www.newmajestic.com
MADE IN CHINA



Per scaricare il manuale d'istruzioni inquadra il QR code:
To download the instruction manual frame QR code:
Um die Bedienungsanleitung herunterzuladen, scannen Sie den QR-Code:
Pour télécharger le manuel d'instructions, scannez le code QR :
Para descargar el manual de instrucciones, escanee el código QR:



Safety warnings

For safe use and to obtain maximum performance, it is recommended that you carefully read the following instruction manual.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT DISASSEMBLE THIS APPLIANCE. THERE ARE NO USER REPAIRABLE PARTS. FOR REPAIRS, CONTACT QUALIFIED TECHNICAL PERSONNEL.

To avoid electric shock or fire, do not expose the appliance to rain or moisture.



This symbol warns the user to read the user manual carefully before using the appliance.

IMPORTANT NOTES


- Use must be permitted only to responsible adults, adequately instructed on the damages resulting from incorrect use.
- This appliance can be used by children over the age of 8 if they are supervised or have received instructions on how to use the appliance safely and understand the dangers. Cleaning and maintenance operations by the user must not be carried out by children unless they are over 8 years old and supervised. Keep the appliance and its cord out of reach of children under 8 years of age.
- The appliances can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if supervised or if they have received instructions on the safe use of the appliance and understand the dangers.
- Children must not use the appliance as a toy.
- Do not allow the appliance to be used by children or disabled people without supervision.
- Keep away from pets.
- Never use the appliance in places where the cord, plug and the product itself may come into contact with water or wet surfaces. Do not use the

appliance outdoors, as rain could cause short circuits. Do not touch the appliance with wet hands.


- Avoid installing the unit in the locations listed below:
 - Places exposed to direct sunlight or near heat-generating equipment, such as radiators;
 - Above other appliances that can radiate excessive heat;
 - Places that block ventilation or are humid or dusty;
 - Environments subject to continuous vibrations;
- Do not place any accessories with naked flames, such as lighted candles, on the apparatus.
- Do not try to repair or work on the appliance yourself. Incorrect interventions or tampering may invalidate the warranty. In case of damaged parts or suspected malfunction, stop use immediately and consult qualified personnel. Never immerse the appliance in water or other liquids. Do not place containers filled with liquids (e.g. vases) on top of the appliance.
- Do not touch the appliance with wet hands and do not place it near sinks, tubs or containers of liquids. Use the product only if in perfect condition. If the appliance has been immersed in water or is damaged, contact qualified personnel.
- The product should not be used if it has been dropped or shows visible signs of damage.
- **Contact only qualified service personnel to avoid voiding the warranty. For information and questions, contact the New Majestic SpA technical assistance service.**

Package contents


| | |
|----------------------|---------|
| 1 RS 138WI | 1 piece |
| 2 POWER SUPPLY | 1 piece |
| 3 USB-C CABLE | 1 piece |
| 4 INSTRUCTION MANUAL | 1 piece |
| 5 WARRANTY CARD | 1 piece |

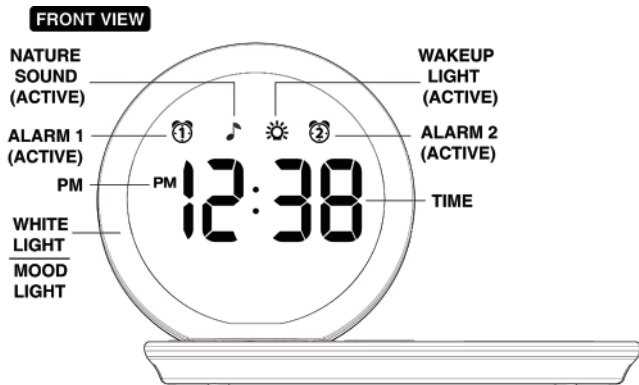


TOP VIEW

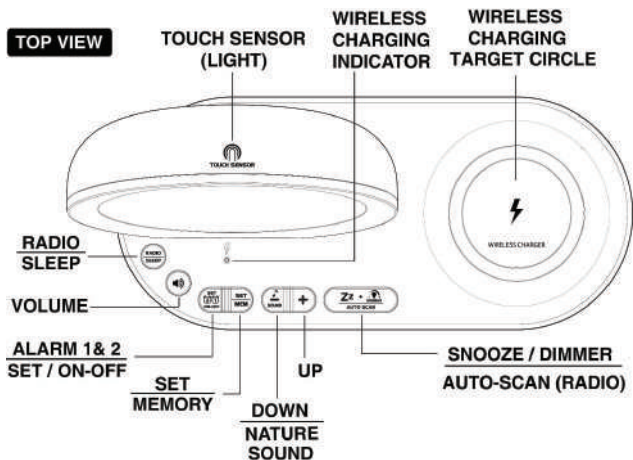

BACK VIEW

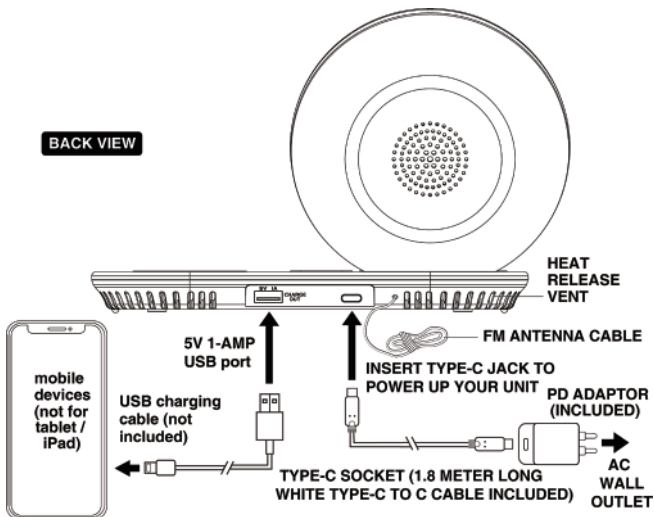 

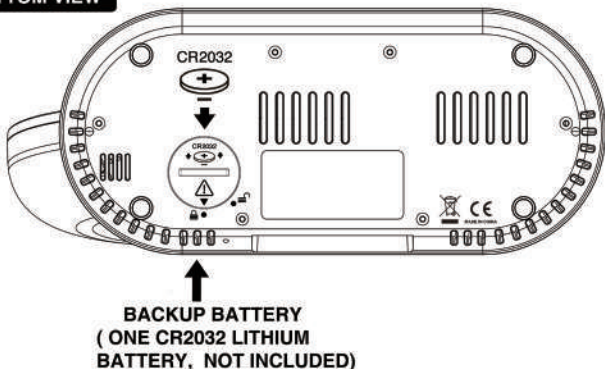 BOTTOM VIEW**BACKUP BATTERY INSTALLATION**

The product requires a CR2032 battery (not included) to keep settings in the event of a temporary power failure. To install the battery, unscrew the cover located at the bottom of the product, position the battery respecting the correct polarities, replace the cover and screw it.

It is recommended to remove the battery if the product remains unused for a prolonged period.

In the event of a temporary AC power failure, if the backup battery is inserted, the time and all settings will remain stored but alarms, lights, nature sounds and the display will not function.

MENU

Connect the USB-C cable to the power supply input and to the input on the product and insert the power supply into the wall socket. The display will turn on and Standby mode will be active.

USING WIRELESS CHARGING

- Place the smartphone with the back facing downwards in the center of the charging base.
- During charging the LED indicator remains lit steadily. If the indicator flashes or remains off, the device is not charging: reposition it making sure it is in the center of the charging base.

Warning:

- Do not leave devices on the charging base for extended periods after they have been fully charged to prevent the charger from overheating;
- Make sure the ventilation slots on the back of the device are not blocked;
- Avoid placing foreign objects such as metals, magnets, magnetic cards, paper clips, etc. between the device and the wireless charging base as it may cause malfunction or overheating.
- If you use a case for your device, it may interfere with wireless charging. If necessary, remove the case before charging.
- To use wireless charging, use the supplied power supply. The use of incompatible power supplies could damage or prevent the wireless charging from functioning correctly.





USING USB CHARGING

You can charge an external device, such as a smartphone or mp3 player, by connecting it to the USB charging port on the back of the product using a USB cable (not included). The product cannot access the contents of the connected external device.

The USB-A charging port can provide a maximum output of 5V 1A.

Note : only use the original power supply supplied with the device as the use of unsuitable chargers could prevent the external device from charging correctly.

SETTINGS





Long press the key  while the product is in Standby to access the settings, then use the  or  keys to adjust the values and press  to confirm and move to the next item.

The following parameters can be adjusted in order:

- Hour
- Minutes
- Time format (24 hours – 12 hours)
- Year
- Month
- Day
- Snooze duration (5-60 minutes)
- Alarm light (the function, if active, allows you to gradually turn on the alarm light 15/30/45/60 minutes before the alarm time).


If no button is pressed for approximately 10 seconds the product will automatically exit the settings menu.

SETTING ALARM 1 AND 2

Long press the key  while the product is in Standby to access the alarm adjustment settings, then use the  or  keys to adjust the values and press  to confirm and move to the next item.





The following parameters can be adjusted in order for Alarm 1 and then for Alarm 2 (the symbol of the selected alarm will be lit on the display):

- **Hour**
- **Minutes**
- **Sound** → alarm clock: **boo** (buzzer), **rd** (radio), **N1** (birds), **N2** (river), **N3** (jungle), **N4** (ocean), **N5** (storm), **N6** (bells), **N7** (fire), **N8** (white noise)
- **Frequency** → **1-7** (Mon–Sun), **1-5** (Mon–Fri), **6-7** (Sat–Sun), **1-1** (one day only)
- **Volume** → N1 – N8 (this option is not available in buzzer mode).




Note : While adjusting the settings you can press the key  to save them and exit. The device automatically saves and exits alarm setting mode if no buttons are pressed for approximately 10 seconds.

ACTIVATE/DEACTIVATE ALARMS 1 AND 2


In Standby mode, press briefly  to change in sequence:

- only alarm 1 active (the icon  will be on);
- only alarm 2 active (the icon  will be on);
- alarm 1 and alarm 2 active (the icons  and  they will be lit);
- no active alarm.

WAKE UP INTERRUPTION

When an alarm sounds, the corresponding  or symbol  flashes. Briefly press the button  to stop the alarm, keeping it active for any subsequent days.




SNOOZE



When the alarm is active you can press the button  to temporarily silence it and snooze the alarm until the end of the set snooze time (the default value is 5 minutes).

Note : If the second alarm goes off while the first one is in progress, or if the first one is in snooze mode, the latter will be overwritten. In this case, the first alarm setting will be automatically reprogrammed to activate the following day.


LUMINOUS RING


The device features a light ring that can be used as an ambient or mood light.



To activate the ambient light, touch the button  until the writing **C1** appears, then adjust the light intensity (between **L00** and **L15**) with the  or  buttons.

By pressing the button  again you enable the single-colour mood light (the display shows **C2**). To freeze the displayed color, touch the button  again, the display will show **C3**.




To activate the light with a rotating rainbow effect, press the button .

until the word **C4 appears** . To block the color rotation press the key  TOUCH SENSOR, the display will show **C5** .





To turn off the light ring, press and hold the button  TOUCH SENSOR .

Note : When ambient or mood light is on, pressing the button   can adjust the light intensity between **High, Low** or **Off** .


REGULATION DISPLAY BRIGHTNESS

You can adjust the display brightness between **High, Medium** or **Low** by pressing the button   when the time is displayed. The selected mode will also affect the brightness of the ambient/mood light if active, which will automatically vary depending on the display setting (between **High, Low** or **Off**). Once the ambient/atmosphere light is turned off, to reactivate it you must press the button  again as it will not automatically reactivate together with the adjustment of the display brightness.

READING LAMP

In Standby mode, long press the button   to activate the function which will activate the light ring light at the maximum brightness level, allowing the user to read at night. To deactivate the function, long press the button   again.

SOUNDS OF NATURE

In Standby mode, press the button  several times to activate playback of nature sounds, choosing between:

N1 → birds

N2 → river

N3 → jungle

N4 → ocean


N5 → thunderstorm

N6 → bells

N7 → fire

N8 → white noise

OFF .


To adjust the playback volume by choosing between **HI** (high) and **LO** (low), press the button .



To stop playback, select **OFF** or long press the button .

FM RADIO

To turn the FM radio on/off, press the button .

To tune the radio to the desired frequency, briefly press the  or **+** buttons.


To automatically search for the first available next/previous station, long press the  or **+** buttons.

To adjust the volume, press  and then use the keys  or **+** to choose the volume level between **L01** to **L16** .




Note: extend the antenna cable to its maximum length to optimize radio reception and place it near a window and away from other electronic devices that may cause interference.

AUTOMATIC SAVING OF FM PRESELECTIONS

 

You can automatically store up to 20 FM stations in presets.

After turning on the radio, long press the button  to start searching and saving FM stations with strong signal in the presets (P01 to P20).

MANUAL SAVING OF FM PRESELECTIONS



Play the radio station you want to store, long press the button  until **P01** flashes, select the number of the preset in which you want to store the station (**P01-P20**) with the  or **+** keys and press  to store the station.

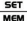
RECALL FM PRESELECTIONS

After turning on the radio, briefly press the button , then select the preselection with the  or **+** buttons.

AUTOMATIC OFF TIMER

In FM Radio mode or when Nature Sounds are active, you can automatically turn off audio playback when the set timer expires.

During playback, long press the button  to activate the function, the display will show **05** . Press  repeatedly to select the period (in minutes) from **05 , 10 , 15 , 30 , 45 , 60 , 75 , 90 , OFF**. Once the set time has elapsed, playback will end automatically.

When the function is active you can long press the button  to view the remaining minutes before automatic shutdown.

To deactivate the timer, press the button  to turn off the radio or press and hold the button  to stop playing nature sounds.

TROUBLESHOOTING

If the device displays an incorrect time or does not work properly, it may be due to electrostatic discharge or other interference.

To resolve the issue, follow these steps:

- Remove the power cord from the product.
- Take out the backup battery.
- First reinsert the power cable and then the backup battery, respecting the correct polarities: the device will be restored to the factory settings .

CARE AND MAINTENANCE


- Clean the product with a soft, damp cloth and allow all parts to dry completely after cleaning.
- Do not use aggressive detergents, brushes with nylon bristles, sharp or metallic cleaning tools, knives, scrapers or similar as they may damage the surfaces of the product.
- Do not immerse the product in water or allow water to enter the product.
- If you plan not to use the unit for an extended period, such as a month or more, remove the batteries to prevent possible corrosion. If the battery compartment becomes corrupted or dirty, clean it carefully and replace the batteries.

Technical specifications

| | |
|--------------------------|--|
| Model | RS 138WI |
| Tuner | FM 87.5 – 108 MHz |
| FM presets | 20 |
| Alarm duration | 1 hour |
| Snooze duration | From 5 to 60 minutes |
| Backup battery | 1x CR2032 (not included) |
| Power supply | AC 100-240V – 50/60Hz → DC 5V 3A, 9V 2.22A, 12V 1.67A (USB-C power adapter included) |
| USB-A output | DC 5V 1A |
| Wireless charging | 15W |
| Unit size | 21,9(W) x 13,8(H) x 9,0(D) cm |
| Weight | 370gr. |

Care and maintenance

- Clean the product with a soft, damp cloth and allow all parts to dry completely after cleaning.
- Do not use aggressive detergents, brushes with nylon bristles, sharp or metallic cleaning tools, knives, scrapers or similar as they may damage the surfaces of the product.
- Do not immerse the product in water or allow water to enter the product.

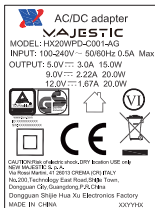

WEEE Logo (Waste electrical and electronic equipment)



Class II, double insulation



Indoor use



Level of efficiency standards



Logo for certification company of Intertek

- AC adaptor manufacturer's name:
Dongguan Shijie Hua Xu Electronics Factory
- Model identifier: HX20WPD-C001-AG
- Input voltage: AC100 - 240V
- Input AC frequency: 50/60Hz
- Output voltage: DC5.0V/ 9.0V/ 12.0V
- Output current: 3.0A/ 2.22A/ 1.67A
- Output power: 15.0W/ 20.0W/ 20.0W
- Average active efficiency: 83.64%/ 85.67%/ 85.69%
- No-load power consumption: \leq 0.10W



WEEE Logo (Waste electrical and electronic equipment)

INFORMATION TO USERS OF DOMESTIC EQUIPMENT



Pursuant to art. 25 paragraph 1 of the legislative decree 14 March 2014, n. 49 “Implementation of directives 2011/65/EU and 2012/19/EU relating to the reduction of the use of dangerous substances in electrical and electronic equipment, as well as waste disposal”.

The crossed-out wheeled bin symbol on the appliance or its packaging indicates that the product must be collected separately from other waste at the end of its useful life. The user must therefore deliver the equipment that has reached the end of its life to the appropriate separate collection centers for electronic and electrotechnical waste, or return it to the retailer in the event of purchasing a new appliance of an equivalent type, in one mode . to one .

Adequate separate collection for the subsequent sending of disused equipment for eco-friendly recycling, treatment and disposal helps to avoid possible negative effects on the environment and health and encourages the reuse and/or recycling of the materials from which the equipment is made.

Illegal disposal of the product by the user entails the application of the sanctions provided for by current legislation.

Any batteries or rechargeable batteries contained in the device must be disposed of separately in the appropriate containers for the collection of used batteries.

The disposal of used batteries must take place at the appropriate separate collection centers or according to local regulations . Batteries compliant with directive 2013/56/EC.



Eco-contribution paid where due - EEE Register n.: IT08020000001647

Eco-contribution paid where due – BATTERY Register No.: IT19070P00005533